

INVOLVED PART	NO.	ERROR MESSAGE	DISPLAY CONDITION	CHECK and SOLUTION
<u>I/O BD</u>	1	Main I/O Board is not connected. Check the connection.	The main I/O board is not detected by the PC	① Check the connection and wiring between the Main I/O board and PC ② Main I/O board malfunctioned→exchange parts ③ PC malfunctioned→exchange parts ④ Wire malfunctioned→exchange parts
	2	Machine ID is not set for Main I/O Board.	No machine ID is setup in the main I/O board	① Main I/O board malfunctioned→exchange parts
	3	Membrane I/O Board is not connected. Check the connection.	The membrane I/O board is not detected by the PC	① Check the connection and wiring between membrane I/O board and PC ② Check the connection and wiring between membrane I/O board and Target ③ Membrane I/O board malfunctioned→exchange parts ④ PC Malfunctioned→exchange parts ⑤ Wire malfunctioned→exchange parts
	4	Sub Machine ID is not set for Membrane I/O Board.	No Sub-machine ID setup in the membrane I/O board	① Membrane I/O board malfunctioned→exchange parts
	5	The machine freezes at the DARTSLIVE logo screen while the number at the right bottom corner keeps showing 2.	The main I/O board is not working (no programme or failed to read)	① Main I/O board malfunctioned→exchange parts
<u>CARD RW</u>	6	Card reader is not connected. Check the connection.	The Card reader is not detected by the PC	① Check the connection and wiring between Card reader and PC ② Card reader malfunctioned→exchange parts ③ PC malfunctioned→exchange parts ④ Wire malfunctioned→exchange parts
<u>SPEED SENSOR</u>	7	Speed sensor is not connected. Check the connection.	The Speed sensor is not detected by the PC	① Check the connection and wiring between Speed sensor and PC ② Speed sensor malfunctioned→exchange parts ③ PC malfunctioned→exchange parts (※) ④ Wire malfunctioned→exchange parts
<u>CAMERA</u>	8	Required no. of cameras is not connected. Some contents will not be available.	The camera(2pcs) is/are not detected by the PC	① Check the connection and wiring between Camera and PC ② Camera malfunctioned→exchange parts ③ PC malfunctioned→exchange parts (※) ④ Wire malfunctioned→exchange parts

※ if the USB port is not working well, try by other port which is available