

DARTSLIVE3 LITE

SERVICE MANUAL

DARTSLIVE 3

L I T E

SERVICE MANUAL



CAUTION

- Before using this product, read this manual carefully to understand the contents herein stated.
- After reading this manual, be sure to keep it near the product or in a convenient place for easy reference when necessary.

BEFORE USING THE PRODUCT, BE SURE TO READ THE FOLLOWING:

- **Perform work in accordance with the instructions herein stated.**

Instructions for work are explained by paying attention to the aspect of accident prevention. Failing to perform work as per the instructions can cause accidents. In the case where only those who have technical expertise should perform the work to avoid hazardous situation, the instructions herein state that the technical personnel should perform such work.
- **Always turn off the power before working on the machine.**

Be sure to turn off the power and unplug the power cable before carrying out any work that requires direct contact with the interior of the product. If the work is to be performed in the power-on status, this manual always states so.
- **Be sure to ground the earth terminal.**

This product is equipped with the earth terminal. When installing the product, make sure that the earth wire is grounded, and connect the terminal to the wire. Unless the product is grounded appropriately, people can be subject to an electric shock. After performing repair, etc. for the control equipment, ensure that the earth wire is firmly connected to the control equipment.
- **Ensure that the power supply used is equipped with an earth leakage breaker.**

Using a power supply which is not equipped with the earth leakage breaker can cause a fire when earth leakage occurs.
- **Specification changes not designated by DARTSLIVE are not allowed.**

The parts of the product include warning labels for safety, covers for personal protection, etc. It is very hazardous to operate the product by removing parts and/or modifying the circuits. Doing so may cause fire or electric shock. Should doors, lids and protective parts be damaged or lost, refrain from operating the product, and contact your product retailer.

DARTSLIVE shall not be held responsible for any accidents or compensation for damage to a third party, resulting from the specifications not designated by DARTSLIVE.
- **Be sure to check for electrical specifications.**

Ensure that the product is compatible with the power supply voltage and frequency requirements of the location.

The product has a nameplate on which electrical specifications are described.

Using any electrical specifications different from the designated specifications can cause a fire and an electric shock.
- **Install and operate the product in places where appropriate lighting is available, allowing warning labels to be clearly read.**

To ensure safety for the customers, labels and printed instructions describing potentially hazardous situations are applied to places where accidents can be caused. Ensure that where the product is operated has sufficient lighting allowing the warnings to be read. If any label is peeled off, apply it again immediately. Please place an order with your product retailer.
- **Be sure to adjust the monitor properly.**

Do not operate the product leaving on-screen flickering or blurring as it is. Using the product with the monitor not properly adjusted may cause dizziness or a headache to the players and the people around them.

- **When transporting or reselling this product, be sure to attach this manual to the product.**
- Even in the case where commercially available monitors and printers are used in this product, only the contents relating to this product are explained herein. Some commercially available equipment have functions and reactions not stated in this manual. Read this manual together with the specific instruction manual of such equipment.
- Descriptions herein contained may be subject to improvement changes without notice.
- The contents described herein are fully prepared with due care. However, should any question arise or errors be found, please contact your product retailer.

INSPECTIONS IMMEDIATELY AFTER TRANSPORTING THE PRODUCT TO THE LOCATION

Normally, at the time of shipment, DARTSLIVE products are in a status allowing for usage immediately after transporting to the location. Nevertheless, an irregular situation may occur during transportation.

Before turning on the power, check the following points to ensure that the product has been transported in a satisfactory status.

- ☐ Are there any dented portions or defects (cuts, etc.) on the package or external surfaces of the cabinet?
- ☐ Are there any damage to the adjuster or caster?
- ☐ Are the power supply voltage and frequency compatible with the power supply specifications of the installation location?
- ☐ Are all wiring connectors properly and securely connected?
(The connectors will not fit unless they are in the correct orientation. Do not push them forcibly.)
- ☐ Does power cable have any cuts or dents on it?
- ☐ Are all accessories available?
- ☐ Do the doors and lids open with the included key? Do the doors and lids close firmly?

ABOUT THIS INSTRUCTION MANUAL

This manual provides information on the operation of the software of this product DARTSLIVE3 LITE and explains it in detail. Note that the shapes illustrated in the photos and pictures in this manual may be different from the actual unit.

This manual is intended for owners, administrators, and operators of this product. Read this manual carefully and fully understand the contents before using the product.

For information on the mechanical and hardware maintenance, refer to another document, "INSTRUCTION MANUAL" .

If you cannot achieve proper functions, contact the retailer. Non-technical personnel should never touch the internal system.

In this manual, important information not extending to personal injury or material damages are described using the term "important" and icons (symbols) shown later, and enclosed in bold frame.

* Descriptions herein contained may be subject to improvement changes without notice.

WARNING

Procedures not described in this manual or marked as to be carried out by “Site Maintenance Personnel” or “Serviceman” should not be carried out by personnel without the necessary knowledge and skills. Work carried out by unqualified persons may cause serious accidents, including electrocution. For safety reasons, if there is no one with knowledge or skill, ask your product retailer to carry out necessary operation.

Part replacement, maintenance and inspection, and handling of abnormalities should be performed by Site Maintenance Personnel or Serviceman. This manual instructs especially dangerous work to be performed by Serviceman with expert knowledge. Site Maintenance Personnel and Serviceman are defined in the manual as below.

Site Maintenance Personnel

Person who has experience of maintenance of amusement machines, vending machines, and other equipment. Under the management of the owner and operator of this product, the person engages in the maintenance of equipment through installation, maintenance and inspection, and replacing consumable parts on a daily basis in amusement facility or in the shop.

Activities of Site Maintenance Personnel

Installation, maintenance, and inspection of amusement machines and vending machines, as well as replacement of units and consumable parts thereof.

Serviceman

Person who engages in design, manufacture, inspection, and maintenance services of equipment at amusement machine manufacturers. Person with expertise in electricity, electronics and mechanical engineering equal to or higher than those of graduates from technical high schools, and engaging in maintenance and management as well as repair of amusement equipment on a daily basis.

Activities of Serviceman

Installation of amusement machines and vending machines; repair and adjustment of electric, electronic and mechanical parts.

Warning Signs

Make sure you fully understand the meaning of and notes on the warning signs indicated on this manual and the cabinet, and operate the product in proper and safe manner. Explanations that require particular attention are classified and specified as DANGER, WARNING, or CAUTION, depending on severity of the potential hazard.

 DANGER	Indicates that mishandling the product by disregarding this pictograph will cause severe injury or death.
 WARNING	Indicates that mishandling the product by disregarding this warning will cause a potentially hazardous situation which can result in death or serious injury.
 CAUTION	Indicates that mishandling the product by disregarding this caution will cause a slight hazardous situation which can result in personal injury and/or material damage.

For the safe usage of the product, the following pictographs are used:

	Indicates "Electric Shock Hazard." It indicates the possibility of electric shock under certain conditions.
	Indicates "High Temperature Hazard." It indicates the possibility of injury from high temperatures under certain conditions.
	Indicates "Hand Hazard." It indicates the possibility of injury caused by a finger or hand being caught in a door or the like.
	Indicates "Prohibition." It indicates what should not be done when handling the product.
	Indicates a "Protective Earth Terminal." Before operating the equipment, be sure to connect it to the ground.

In this manual, information that are important but not leading to personal injury or material damage are indicated with the following pictographs.

 IMPORTANT	It indicates important matters upon installation, operation, and maintenance and inspection of the product.
--	---

TABLE OF CONTENTS

BEFORE USING THE PRODUCT, BE SURE TO READ THE FOLLOWING:	i
ABOUT THIS INSTRUCTION MANUAL	iii
Definition of Site Maintenance Personnel or Serviceman	iv
Warning Signs	v
TABLE OF CONTENTS	vi
1 Overview	1
1 - 1 Name of Parts	1
1 - 2 Overview	2
1 - 3 Components	3
2 How to Play	4
2 - 1 How to Operate	4
■ 2 - 1 - 1 Procedure to Start a Game	4
2 - 2 Using IC Card	5
■ 2 - 2 - 1 IC Card	5
■ 2 - 2 - 2 Overview of IC Card System	5
■ 2 - 2 - 3 Handling IC Card	5
■ 2 - 2 - 4 Removing IC Card	6
■ 2 - 2 - 5 Checking Data on IC Card	7
■ 2 - 2 - 6 Registering Home Shop with IC Card	7
■ 2 - 2 - 7 Rating and Flight	7
2 - 3 Help	8
2 - 4 Game Settings and Optional Game Settings	9
■ 2 - 4 - 1 Selecting Game	9
■ 2 - 4 - 2 Selecting Number of Players	9
■ 2 - 4 - 3 Optional Game Settings	10
■ 2 - 4 - 4 Handicap Setting	11
2 - 5 Game Menu	12
■ 2 - 5 - 1 Game Menu	12
■ 2 - 5 - 2 Darts Position Correction in Game Result	13
■ 2 - 5 - 3 Darts Position Correction in MEDLEY Leg Result	13
3 Preparation for Starting up Online	14
3 - 1 Connecting to Network / Normal Connection	15
3 - 2 Connecting Multiple Units to Network / Using HUB	16
3 - 3 Checking Connection Status with Router	17
4 Starting up New Machine Online (Initial Setup)	19
4 - 1 What is Activation?	20

4 - 2	Initial Setup / Activation of New Machine	21
4 - 3	Activation for Taking Over Registration	23
5	Maintenance Menu	25
5 - 1	Device Settings	27
■ 5 - 1 - 1	Monitor Settings	27
■ 5 - 1 - 2	Select Camera	28
■ 5 - 1 - 3	Select Sensor	29
5 - 1 - 3 - 1	Target Sensor	29
5 - 1 - 3 - 2	Impact Sensor	30
5 - 1 - 3 - 3	Card Reader Sensor	31
■ 5 - 1 - 4	Target	31
■ 5 - 1 - 5	Light	32
5 - 1 - 5 - 1	Number LED	33
■ 5 - 1 - 6	Sound	33
5 - 2	Coin Credit Administration	34
■ 5 - 2 - 1	Counter Management	34
5 - 2 - 1 - 1	Counter by Credit	35
5 - 2 - 1 - 2	Counter by Game	35
5 - 2 - 1 - 3	Reset All Counter Administration Data	36
■ 5 - 2 - 2	Insert Coin Settings	36
■ 5 - 2 - 3	Coin Chute Credit / Free Play Settings	37
■ 5 - 2 - 4	Settings for Regular Game Credit	37
■ 5 - 2 - 5	Happy Hour Credit Settings / Setting Time	37
5 - 2 - 5 - 1	Game Credit Settings	38
5 - 2 - 5 - 2	Time Settings	38
5 - 3	Game Settings	39
■ 5 - 3 - 1	Settings by Category / by Game	39
■ 5 - 3 - 2	Basic Settings	40
5 - 4	Advertise Settings	40
5 - 5	Language Settings	40
5 - 6	Network Settings	40
■ 5 - 6 - 1	Network Test	41
■ 5 - 6 - 2	Online Settings	41
5 - 6 - 2 - 1	Change Registered Shops	41
5 - 6 - 2 - 2	Cancel Network Service	42
5 - 7	Machine Info	43
5 - 8	Housing Recording	44
■ 5 - 8 - 1	Recording function	44

6	Troubleshooting	45
6 - 1	Overview of Network	47
■ 6 - 1 - 1	Network Structure	47
■ 6 - 1 - 2	Supplemental Terminology	47
■ 6 - 1 - 3	Network Operation Status	48
6 - 2	Network Trouble	49
■ 6 - 2 - 1	When it Says OFFLINE	49
■ 6 - 2 - 2	When it Says ERROR	50
6 - 3	Updating Firmware	51
■ 6 - 3 - 1	If the message "I/O BD Firmware upgraded. Please reboot the machine." appears at startup	51


Inquiry

* For better service, the illustrations in the manual may be different from those displayed on the machine.

1 Overview

For details on the dart machine other than software, such as cabinets and components, see another document, "DARTSLIVE3 LITE SE INSTRUCTION MANUAL".


1 - 1 Name of Parts

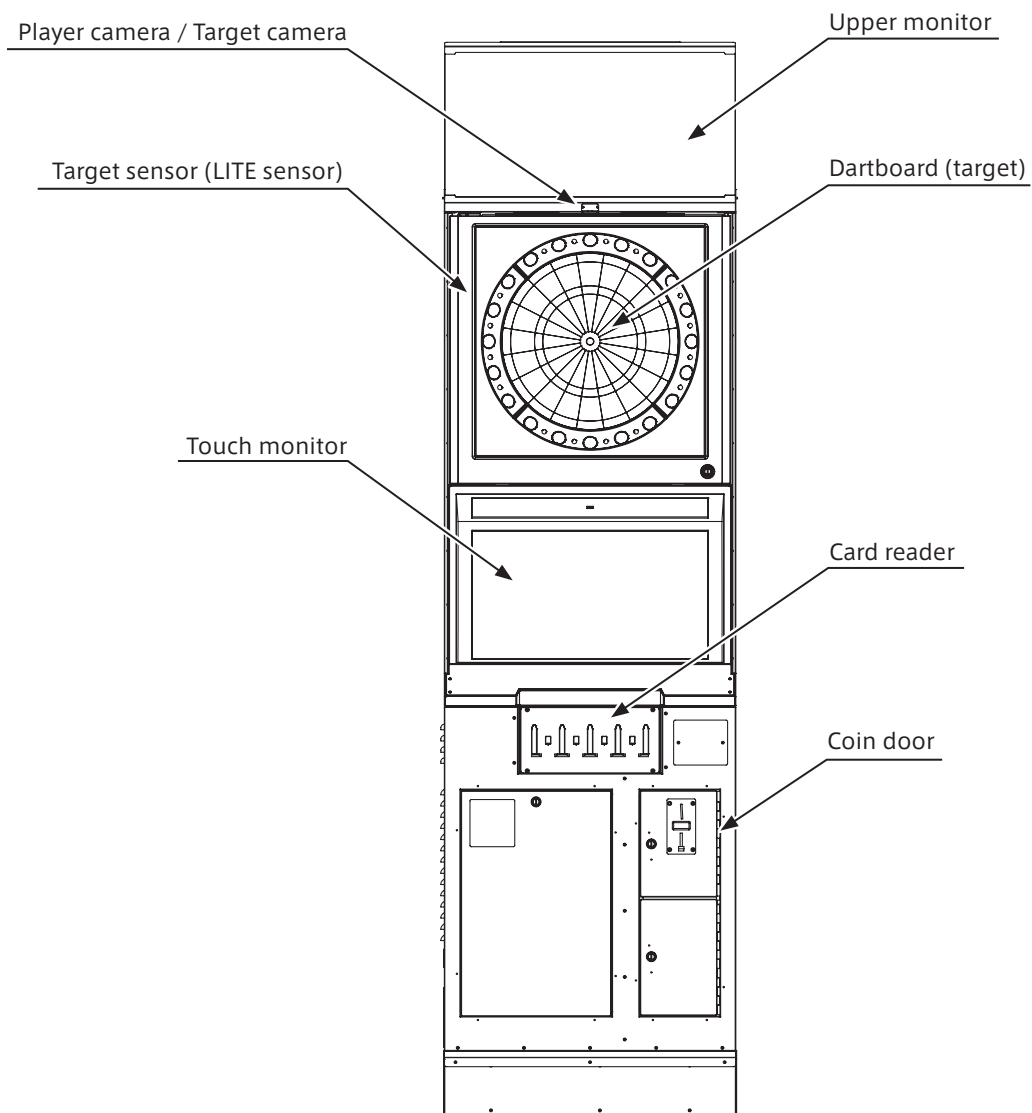

1 - 1 Figure 01

1 - 2 Overview

The "DARTSLIVE3" has a function to connect shops (darts machine locations), to a DARTSLIVE CARD (hereinafter referred to as "IC card") and customers (mobile phones and PCs). These elements allow users to enjoy darts more by using the network.

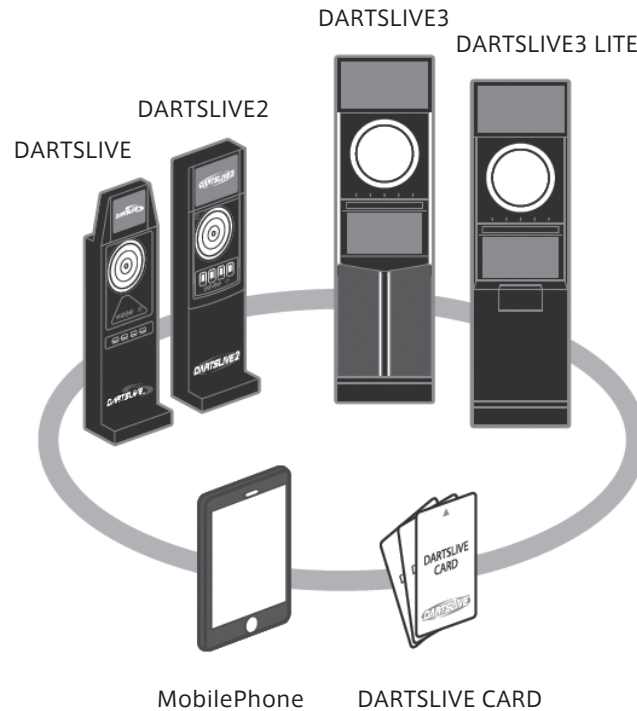

1 - 2 Fig. 01

By connecting dart machines across the nation in a network, we have provided various new games and services like the following.

- Management of individuals' scores
- Registration of home shops (making connection between the shop and the customer)
- Scores from the past
- Hosting limited time event games
- Information sharing among friends and groups

"DARTSLIVE3 LITE" offers more of new games and services.

- LIVE VIEW
- FULL BIT SENSOR
- AUTO CORK
- RANGE
- CUSTOM DARTS
- REPLAY FUNCTION WITH APP



1 - 2 Fig. 02

DARTSLIVE CARD (hereinafter, IC card):

Using IC card, you can view and manage personal data stored on the "DARTSLIVE Server" (hereinafter, server). You can manage score information such as flights and ratings, stats, and number of wins and losses with one card.

In addition, you can display your name and PvP competition history on the machine. You can use this IC card in any "DARTSLIVE", "DARTSLIVE2", or "DARTSLIVE3" shop connected to the network.

* Note that play data will not be updated on the machines not supporting the network.

It has functions in conjunction with the services on the network (PC and mobile phone), such as viewing the transition of scores, exchanging information with group members, managing ranking within the group, and registering the shop you belong that allows you to connect with the shop.

DARTSLIVE Official Website: <http://www.dartslive.com/>

You can access the site from all connected terminals such as PC and mobile phone.

If you have iOS or Android device, you can access it from the DARTSLIVE APP.




1 - 3 Fig. 01

2 How to Play

2 - 1 How to Operate

You can select the buttons on the screen by touching it.

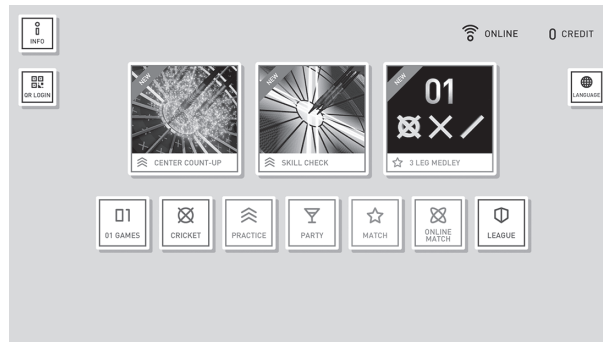

2 - 1 Fig. 01

■ 2 - 1 - 1 Procedure to Start a Game

STEP
1

Insert the IC card into the card reader. To play doubles, stack two cards together and insert them into one reader.
If you don't use IC card, skip this procedure.

STEP
2

On the home menu screen, select the category of the game you want to play. Select the game, select the number of players, and start the game with the start button.
* Some games have restriction on number of players.

STEP
3

Required credit is shown at the center of the screen. Insert the required number of coins.
You can insert coins at any stage of the operation.

■ 2 - 2 - 1 IC Card

- If you insert IC card into the card reader to use the unit, it will store the player's flight, stats, and the result of play on the server. In addition, you can register and authenticate various data in cooperation with the client machine (hereinafter, machine).
- You can check data by accessing the member site in "DARTSLIVE" website (from PC or mobile phone).
DARTSLIVE Official Website: <http://www.dartslive.com/>
If you have iOS or Android device, you can access it from the DARTSLIVE APP.
- By inserting the card into the card reader before you start a game, it will automatically access the database and record the results and score of the game.

■ 2 - 2 - 2 Overview of IC Card System

- The system accesses the server and display the registered name as "player name" on the screen.
- If no name has been registered, it displays "NO NAME + last 4 digits of the access code". Access code is on the back of the card.
- You can view the score data stored on the server.
- On the machine, you can register the shop you go to frequently as your "home shop". For details, see "2-2-6 Registering Home Shop with IC Card".

* Performance such as stats and flights are rated according to the standards of "DARTSLIVE".


■ 2 - 2 - 3 Handling IC Card

- Only IC cards sold in DARTSLIVE shops can be used.
IC cards can be used in "DARTSLIVE" , "DARTSLIVE2" , "DARTSLIVE3" , and "DARTSLIVE3 LITE" machines that are online.
- Insert the card before you reach the screen where you select the number of players. The card will not be recognized if you inserted it when you are on that or later screens. For details, see "2-4-2 Selecting Number of Players".
- After the game has started, do not remove the IC card until the game is over.
- Even if the IC card was recognized correctly, the result of the game may not always be reflected on the server depending on the status of the network connection. We don't guarantee the information in such cases.
- You can insert up to two IC cards into one card reader at the same time. (When playing doubles.)
- IC cards are precision instruments. Keep them away from magnets. Do not bend or wet them.
- When stored information is damaged or lost, we don't recover them and we don't offer warranty or refund.
- You can transfer data for a lost card into another unused IC card.
Follow the procedure on the website at <http://www.dartslive.com/> from PC or mobile phone.
If you have iOS or Android device, you can execute the procedure also in the DARTSLIVE APP.

SINGLES

Insert the cards into the slot at the top of the card reader. There are four slots to insert IC card. They can support up to eight cards by stacking two cards together.


In singles mode, they are P1, P2, P3, and P4 in order from the left. When the machine recognized the IC card, the name of the player appears at the bottom of the screen.

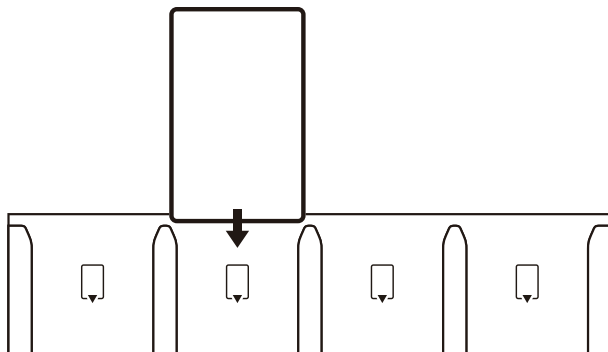

2 - 2 - 3 Fig. 01

DOUBLES

When you insert two IC cards stacked together, it switches to doubles mode. The names of the players appear at the bottom of the screen in the same manner as in the singles mode.

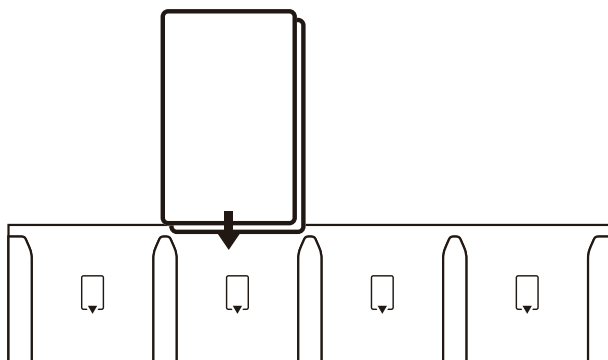


2 - 2 - 3 Fig. 02

■ 2 - 2 - 4 Removing IC Card

Pull out the IC card straight up from the card reader. If you don't pull it straight up, you may damage the IC card.


During the game, do not pull them out until the game ends.

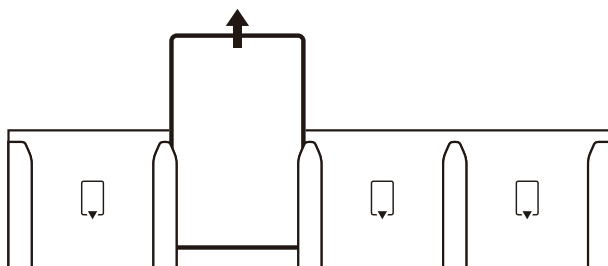

2 - 2 - 4 Fig. 01

■ 2 - 2 - 5 Checking Data on IC Card

You can check the data by inserting IC card and selecting "CARD DATA" after "INFO" on the home menu. The following data stored on the server are available: nickname, name, home shop, rating, flight, stats, RANGE (mm), CORK (mm), and data for DARTSLIVE APP Play Data.

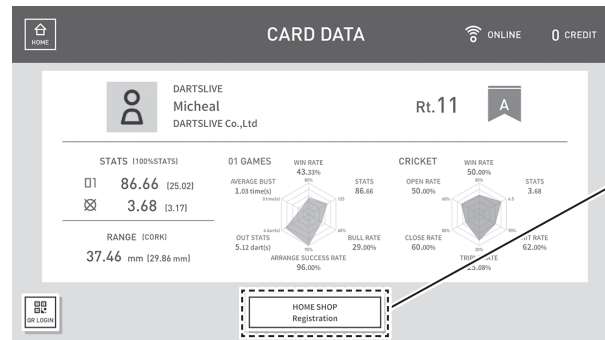


2 - 2 - 5 Fig. 01

■ 2 - 2 - 6 HOME SHOP Registration with IC Card

You can register your home shop by tapping HOME SHOP Registration, regardless of the number of IC cards.

Home Shop Registration : HOME SHOP Registration you are currently playing at as home shop by tapping Register Home Shop. It changes the home shop of all IC cards inserted in the card readers 1 to 4 at the same time.

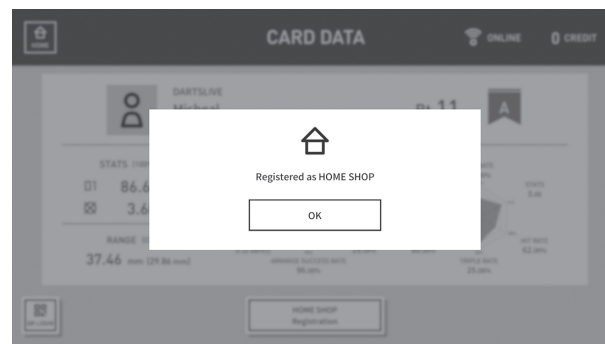

2 - 2 - 6 Fig. 01

■ 2 - 2 - 7 Rating and Flight


By inserting IC card and playing at least ten games of 01 game and STANDARD CRICKET in PvP with two or more players, personal rating and flight will be calculated. Ratings are required for participating in the tournaments and for automatically applying for handicap.

■ 2 - 3 - 1 IC Card & Card Data Help


Please refer to "DARTSLIVE HELP" on the official DARTSLIVE website.
<https://dlservicehelp.dartslive.com/hc/en-us/>

■ 2 - 3 - 2 Description of Games

Images of the games have magnifying glass icon.
 When you touch the image, the description of the game appears.

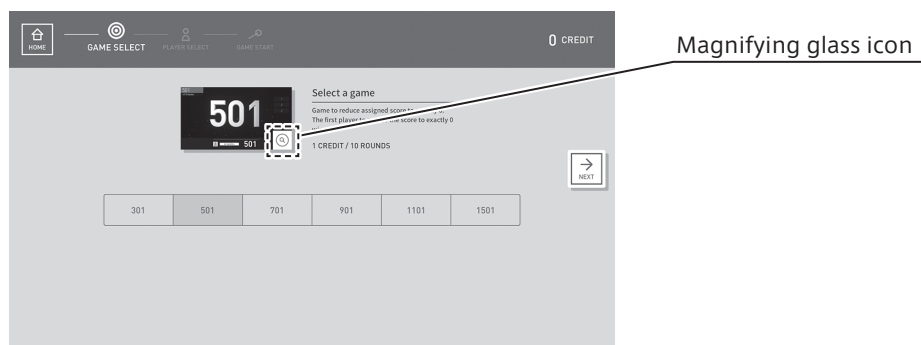

2 - 3 Fig. 01

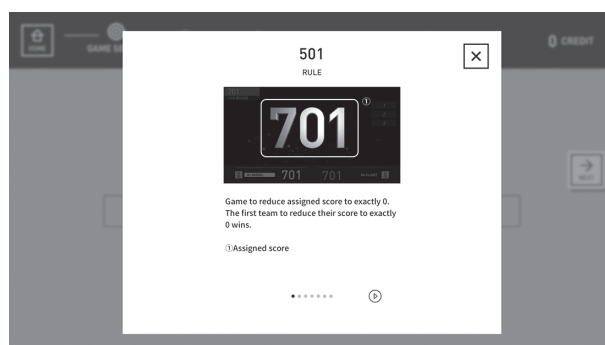


2 - 3 Fig. 02

2 - 4 Game Settings and Game Option Setting

■ 2 - 4 - 1 Selecting Game

When you select a category in the home menu, the game selection screen appears. Select the game you want to play and tap NEXT. Swiping the screen gives you the same effect as tapping NEXT.

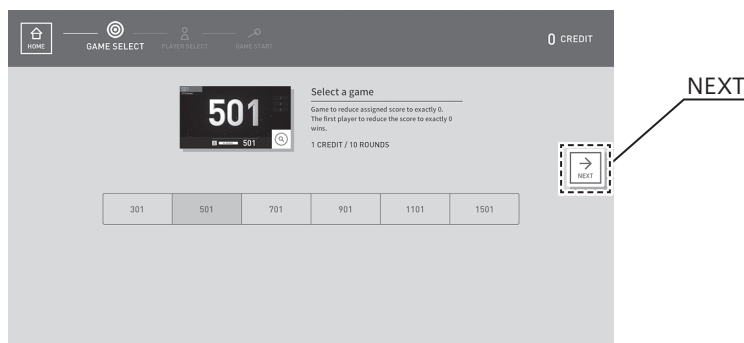

2 - 4 - 1 Fig. 01

■ 2 - 4 - 2 Selecting Number of Players

Select the number of players.

If you have not inserted two stacked IC cards in the same slot, the icon "doubles setting" appears under the player name.

Tapping it will change the setting to doubles.


If you want to cancel it, tap the icon "cancel doubles setting".

* When you configured the setting for doubles, the notation of the select number of player icon will change from PLAYER to TEAM.

If you have IC card inserted and set it to doubles, "Switch first/second" button appears. You can swap the first and second by tapping the button.




2 - 4 - 2 Fig. 01

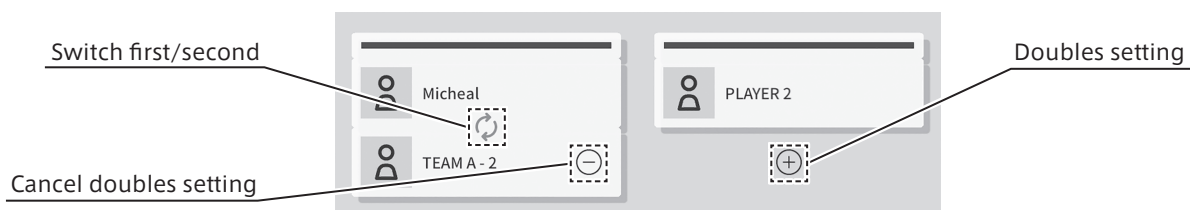

2 - 4 - 2 Fig. 02

■ 2 - 4 - 3 Game Option Setting

When you tap GAME OPTION, it will open the setting screen.

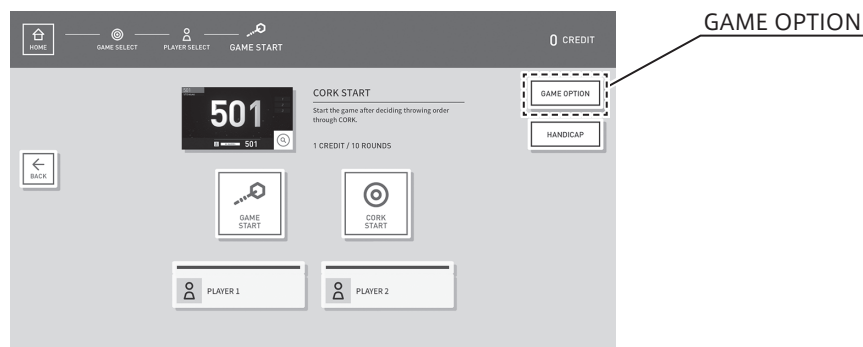

2 - 4 - 3 Fig. 01

IN : Specify the first target to hit in the game.

OPEN : No specific target to hit first.
DOUBLE : Start the game with hitting a double.

OUT : Specify the last target to hit in the game.

OPEN : No specific target to hit at the end.
DOUBLE : Out the game with hitting a double at the end.
MASTER : Out the game with hitting BULL, double or triple at the end.

BULL : Set the points for double bull and single bull.

50/50 : 50 points for both double and single bulls.
25/50 : 50 points for double bull, and 25 points for single bull

CUT THROAT : Setting available exclusively in CRICKET with three or more teams. In this setting, the points you get are distributed to other players and the player with the fewest points wins.

THROWING ORDER : Throwing order to apply in the second and later legs, available in MEDLEY.

LOSER : Loser throws first.
ALTERNATIVE : Players alternately throw first.

FULL LEG : Turn it ON to play the game to the last LEG regardless of the number of wins the player has over another player.

MANUAL CORK : The setting available only when two players playing PvP. Setting to cork at before a game and before a CHOICE.

OFF : Play the game with AUTO CORK.
ON : Play the game with MANUAL CORK.

< Availability of Option Settings for Each Game >

	01	CRICKET	MEDLEY
IN	●		●
OUT	●		●
BULL	●		●
CUT THROAT		●	
THROWING ORDER			●
FULL LEG			●
MANUAL CORK	●	●	●


2 - 4 - 3 Fig. 03

* MANUAL CORK setting is only available in PvP for two players or two teams.

■ 2 - 4 - 4 Handicap Setting

When you tap HANDICAP, handicap menu appears.

* The handicap function can be selected only in PvP by two or more teams.

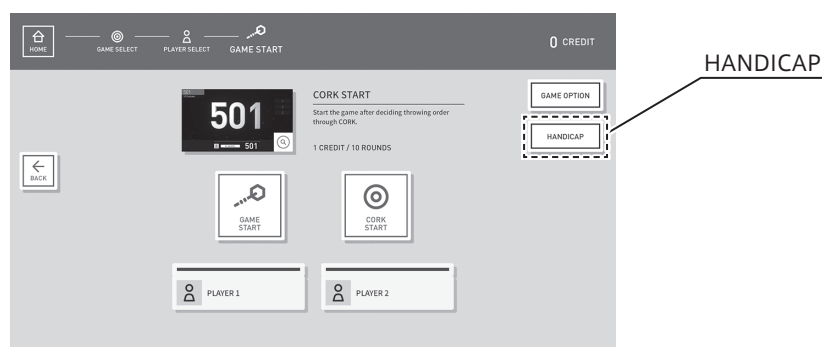


2 - 4 - 4 Fig. 01

By selecting ON, numbers are automatically reflected while IC card with calculated rating is inserted.

If no rating has been calculated or if no IC card is inserted, the rating 1 is automatically reflected.


Both players can change the number with the icons "+" and "-". Handicaps are automatically added according to the changed number.

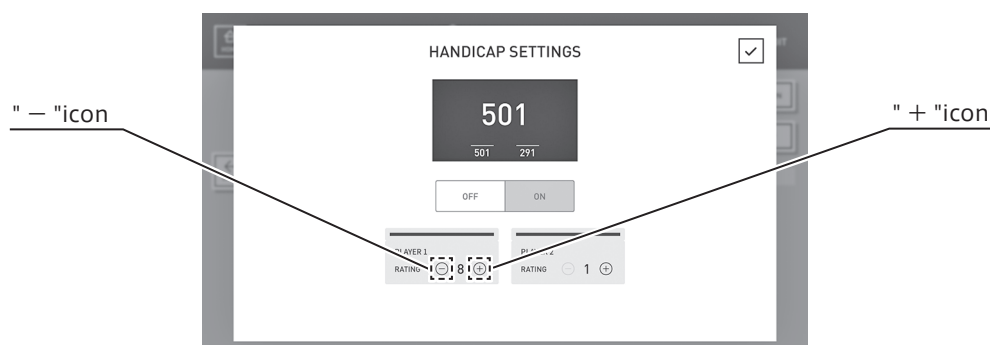

2 - 4 - 4 Fig. 02

2 - 5 Game Menu

When you tap the game menu button displayed on the touch screen monitor, the item window appears.

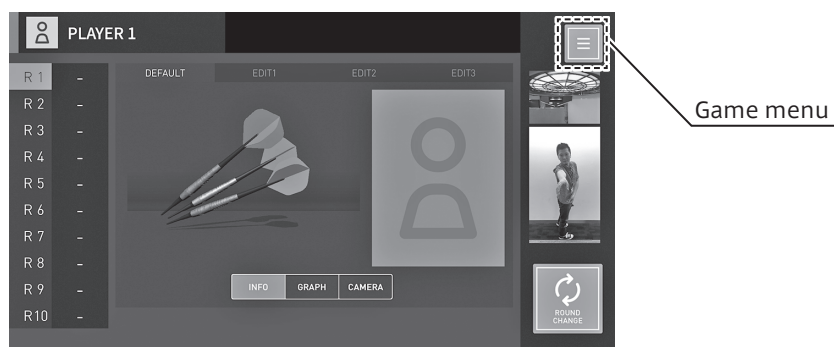

2 - 5 Fig. 01


■ 2 - 5 - 1 Game Menu

Game Rules : You can check the rules of the game you are playing.

Back to the Prev Player : You can invalidate the dart thrown by the player in his/her turn and make him/her throw again.
If that player has not thrown yet, you can go back to the previous player.

Darts Position Correction : You can correct the position where the dart thrown hit.
* In some games, you may not be able to select this.


Finish the Game : You can end the game you are currently playing.

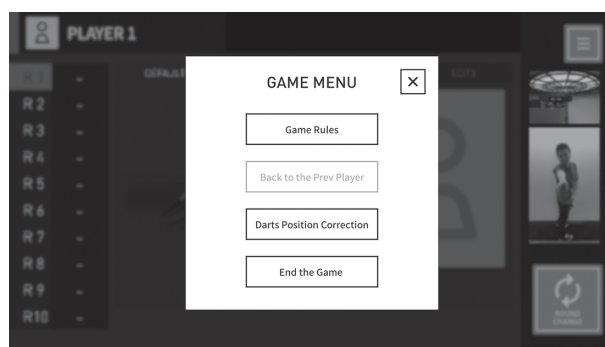

2 - 5 - 1 Fig. 01

■ 2 - 5 - 2 Darts Position Correction in Game Result


When you tap the result menu button displayed on the touch screen monitor, the window for Darts Position Correction function appears.

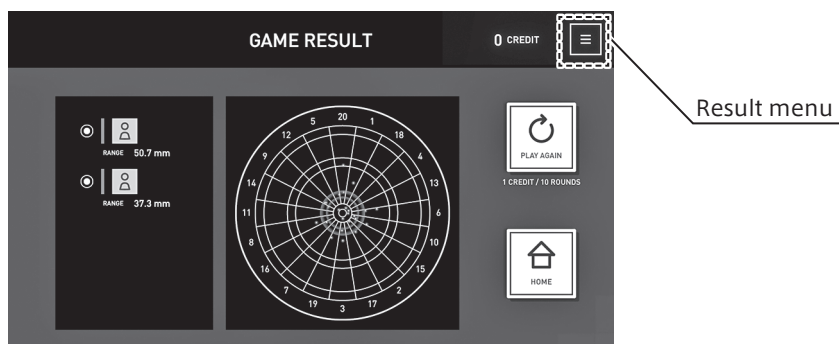

2 - 5 - 2 Fig. 01

■ 2 - 5 - 3 Darts Position Correction in MEDLEY LEG Result

When you tap the result menu button displayed on the touch screen monitor, the window for Darts Position Correction function appears.

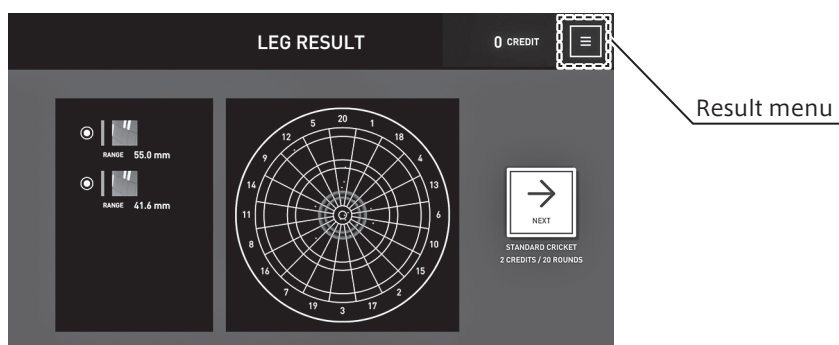

2 - 5 - 3 Fig. 01

3 Preparation for Starting up Online

To use DARTSLIVE3 LITE online (using a network), you need to prepare the network environment in advance.

In addition, you need to register (application and review) the shop. Contact DARTSLIVE Co., Ltd. for details on how to register the shop.

The following items are required for starting up online. However, the description below may not apply in some cases.

Initial construction : Modem(*1) :
Internet Network Installation.

Router(*2) :
After completing the registration of the installation shop, we will send you the router specified by us.

Power supply : 4 outlets for darts machine, router and modem.

Activation setting : The network setting for "DARTSLIVE3 LITE" provided by the dealer.

Hub : Required when connecting more than one "DARTSLIVE3 LITE" machine.

(*1) A modem is a type of network device. A modulator-demodulator. It converts digital data into audio signals and sends them onto telephone lines, or converts audio signals from telephone lines into digital data. In the case of an optical line, it is called an optical network unit.

(*2) A router is a device connecting multiple LANs. A device installed at a branch point connecting multiple LANs and relaying data flowing on a network to other networks.


3 - 1 Connecting to Network / Normal Connection

This is how you connect up to four "DARTSLIVE3 LITE" to the network.
First, connect the LAN cables as shown in the figure. Turn on the power at ① and then at ②.
Wait about one minute, and turn on the power at ③.

* If you do not turn on their power in correct order, "DARTSLIVE3 LITE" will not be updated properly.

* You can power on ③ "DARTSLIVE3 LITE" in any order.

To operate five or more DARTSLIVE3 LITE, the connection requires use of HUB. See "3-2 Connecting Multiple Units to Network / Using HUB".

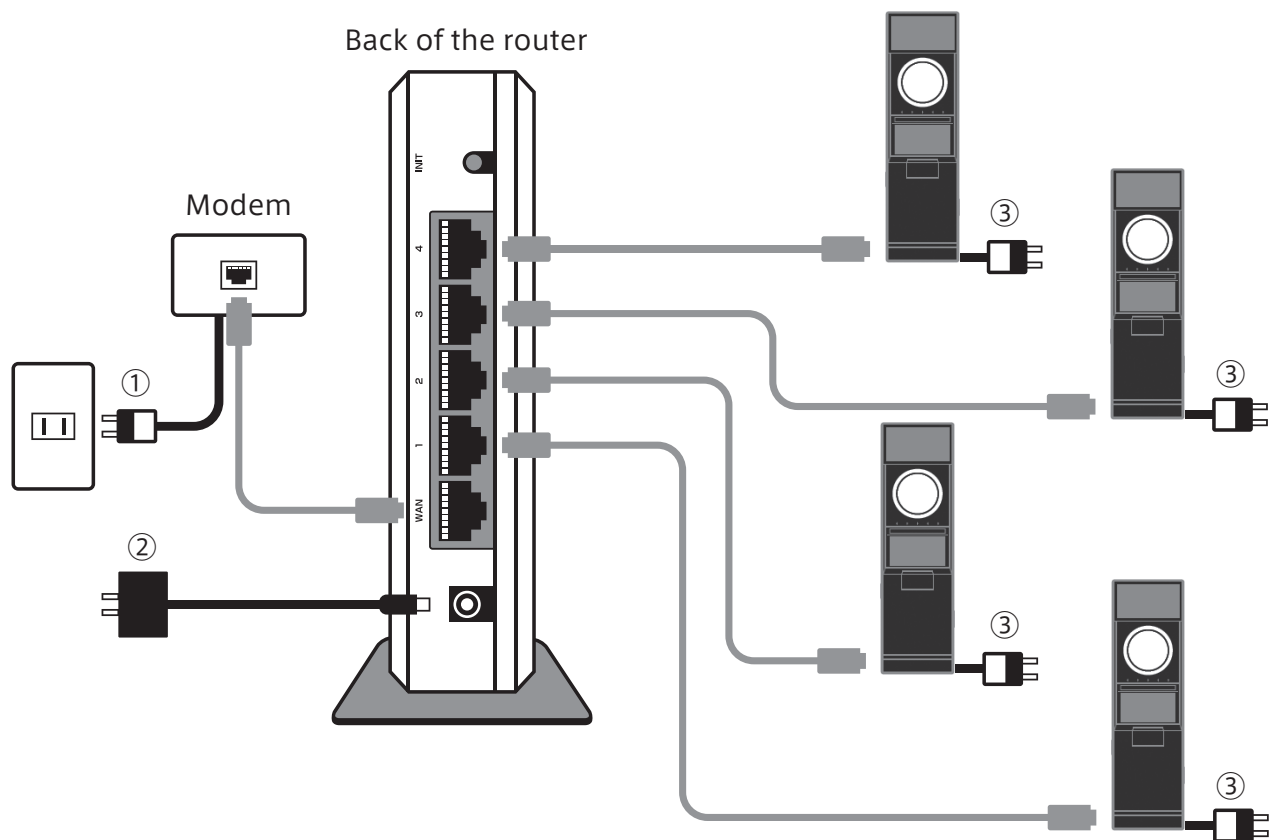

3 - 1 Fig. 01


STOP IMPORTANT

The terms and conditions prohibits connecting devices other than "DARTSLIVE", "DARTSLIVE2", "DARTSLIVE3" and "DARTSLIVE3 LITE" to the router prepared exclusively for DARTSLIVE. Note that if other devices are connected, we do not guarantee proper connection of "DARTSLIVE", "DARTSLIVE2", "DARTSLIVE3", "DARTSLIVE3 LITE" and the router.

When connecting five or more "DARTSLIVE3 LITE", you should prepare a HUB. When using a HUB, connect the router and the HUB with a LAN cable. You will connect the router and "DARTSLIVE3 LITE" via HUB. Turn on their power in order of ①, ②, ③, and ④.

* You can power on ④ "DARTSLIVE3 LITE" in any order.

Customers who are to connect multiple "DARTSLIVE3 LITE" should consult with DARTSLIVE Co., Ltd. When using a HUB, the connections are basically the same as in the normal setting. (See 3-1 Fig. 01)

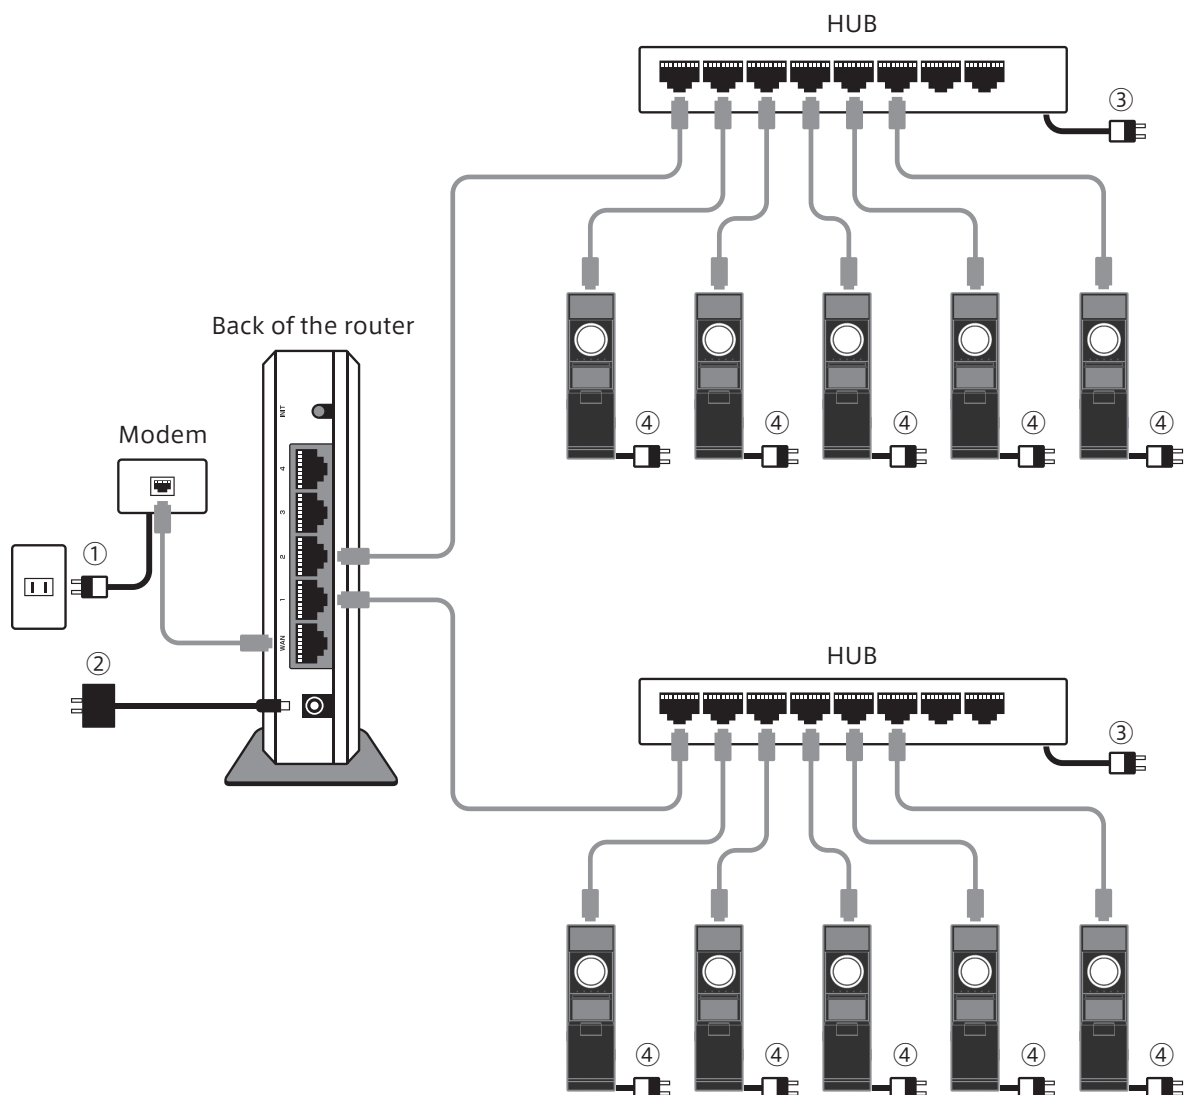


3 - 2 Fig. 01

3 - 3 Checking Connection Status with Router

After connecting the LAN cables and turning on the power, check the three types of LED indicators on the front of the router.

When the network is operating normally, POWER, WAN (when modem or like device is connected), and LAN (HUB) indicators will light. You may be able to identify the cause of a network failure by checking these indicators.

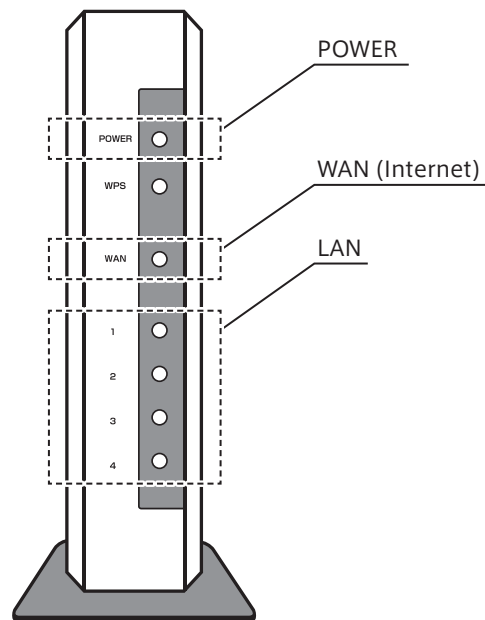

3 - 3 Fig. 01

POWER : It lights up when the router is powered on.
If it is not light up, check the power adapter.

WAN (Internet) : It lights up or flashes when it is connected to an internet network.
If it does not light up, check the connection of the LAN cable, and then condition of the network.

LAN : While it is connected to "DARTSLIVE3 LITE", the indicators LAN 1 to 4 light up or blink. The numbers correspond to each of the connected "DARTSLIVE3 LITE" ① , ② , ③ and ④ .
If it does not light up, check the connection to "DARTSLIVE3 LITE".

< Network Errors >

- Screen of "DARTSLIVE3 LITE" freezes.
 - Restart DARTSLIVE3 LITE.
- There is one unit which does not go online.
 - You may have a loose LAN cable. Check the sockets on the HUB connected to "DARTSLIVE3 LITE" or the router.
- No "DARTSLIVE3 LITE" come online in one specific area.
 - Check the indicators on the HUB. If they are not lit, restart the HUB.
 - If the indicators are not lit, check if you are using appropriate type of LAN cable.
 - Check the connection of LAN cable between the router and HUB.
 - HUB may be freezing. Restart it.
- All "DARTSLIVE3 LITE" in all areas do not come online.
 - Check the indicator on the router. If it is not lit, restart the router.
 - The router may be freezing. Restart it.
 - If the indicators shown in 3-3 Fig.01 are lit, it is operating normally. Refer to the instruction manual of the router for details on its indicators.
 - You may have a loose LAN cable. Check the sockets for LAN cables.

4 Starting up New Machine Online (Initial Setup)

STOP IMPORTANT

Do not turn off the power when it is downloading data. It may cause a failure.

< Operation at Machine Startup >

If the machine is connected online, it checks for the latest program and data at startup. When there is a download progress bar at the bottom of the screen as shown below, it is downloading the data.



4 Fig. 01

4 - 1 What is Activation?

After connecting to the network, initial setup (activation) is required to start a new machine for the first time. Initial setup is required not only "when starting a new machine" but also "when taking over registration to a new machine due to failure or other reasons."

Note that the online service will start with the completion of the initial setup, and you will be charged. When a new machine or a machine with replaced I/O board is connected to the network and turned on, it opens the initial setup screen.

Refer to "3 Preparation for Starting up Online" for how to connect to the network.

The following three items are required for initial setup:

Registered Dealer ID : ID issued by DARTSLIVE Co., Ltd. at the time of dealer registration.

Dealer PASS (PIN): PIN issued by DARTSLIVE Co., Ltd. at the time of dealer registration.

Registered Shop ID : Shop ID provided to you when setting up the network connection.
(For activation, you need Dealer ID, Dealer PASS, and Shop ID.)

These input information are verified in the database, and the setting completes when they are authenticated.

At the moment the setting is completed, you can start the game online.


"When taking over registration to a new machine due to failure or for other reason", the following items are required in addition to the above.

ID of the machine from which registration is transferred from :

Unique machine ID is stored on the I/O board. Machine ID is affixed to the I/O board with a sticker.

* The I/O board connected to "DARTSLIVE3 LITE" is the dedicated I/O board for "DARTSLIVE3 LITE".

* Please note that the registration cannot be transferred between different models as shown below.

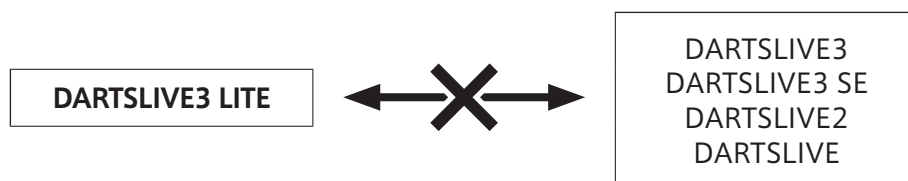


4 - 2 Initial Setup / Activation of New Machine

Execute procedure to register and set up a new "DARTSLIVE3 LITE" in the initial state and make it available for online use.

STEP 1

Connect "DARTSLIVE3 LITE" to the network and power it on.

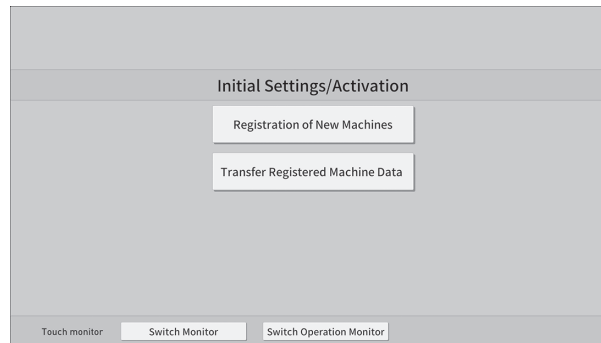

4 - 2 Fig. 01


STEP 2

It opens the initial setup/activation screen. (4-2 Fig. 01) Select "Registration of New Machines". If menu screen appears instead of the initial setup screen, you may have a problem with the network connection. See "6 Troubleshooting".

STEP 3

One by one, enter your "Registered Dealer ID", "Registered Dealer PASS (PIN)" and "Registered Shop ID".


* If there is an error in the input information, the message appears on the screen stating so.

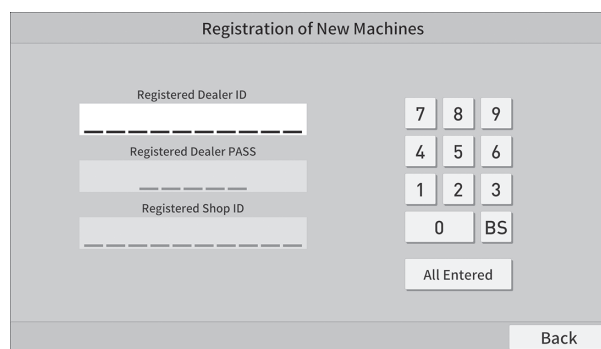

4 - 2 Fig. 02

STEP 4

The dealer name and shop name to register appear on the screen. Check the information to register. Tap "Yes" to complete the registration.

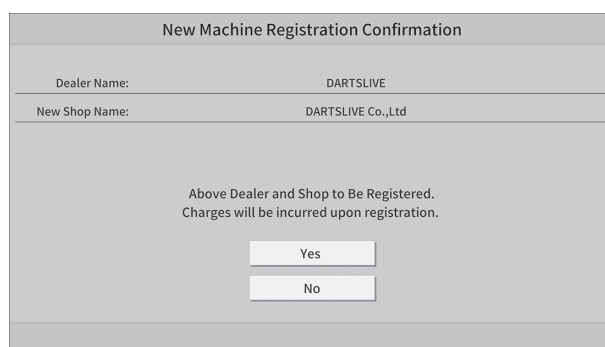


The screen displays the registration confirmation details. At the top, it says "New Machine Registration Confirmation". Below this, there are two fields: "Dealer Name:" with the value "DARTSLIVE" and "New Shop Name:" with the value "DARTSLIVE Co.,Ltd". In the center, a message states: "Above Dealer and Shop to Be Registered. Charges will be incurred upon registration." At the bottom, there are two buttons: "Yes" and "No".

4 - 2 Fig. 03


STEP 5

Tap "OK" to move to the home menu in the online mode.

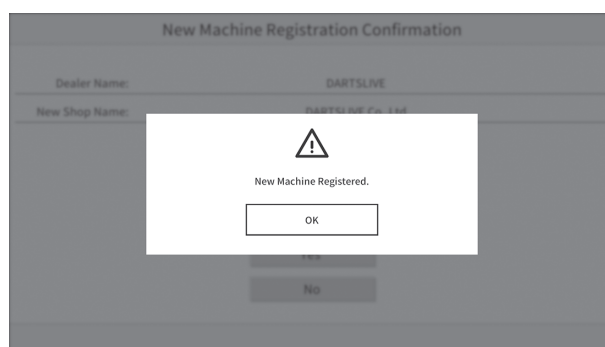

This screen is identical to Fig. 03, but with a white dialog box in the center. The dialog box contains a warning icon (a triangle with an exclamation mark) and the text "New Machine Registered." Below the text is an "OK" button. The "Yes" and "No" buttons from the previous screen are still visible in the background.

4 - 2 Fig. 04

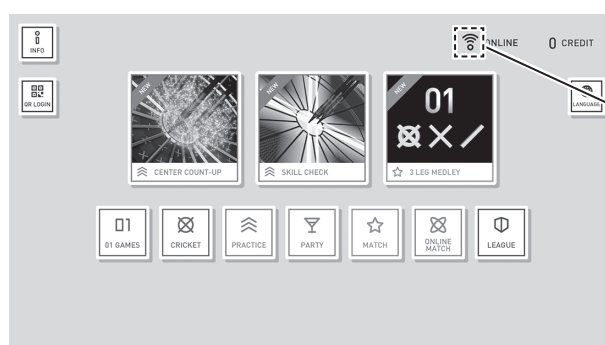

The home menu screen features a top bar with an "INFO" icon, a "LOG IN" button, and a status area showing "01 CREDIT" and an "ONLINE" indicator (a small icon with a signal wave). The main area contains three large game mode buttons: "CENTER COUNT-UP", "SKILL CHECK", and "01 3 LES MEDLEY". At the bottom, there is a row of seven smaller buttons: "01 GAMES", "CRICKET", "PRACTICE", "PARTY", "MATCH", "ONLINE MATCH", and "LEAGUE".


Online indicator

4 - 2 Fig. 05

4 - 3 Activation for Taking Over Registration

When replacing the board with a new one due to failure or other reason, or when taking over registration from an old machine, the following procedure is required.

*Please note that the registration cannot be transferred between different models as shown below.

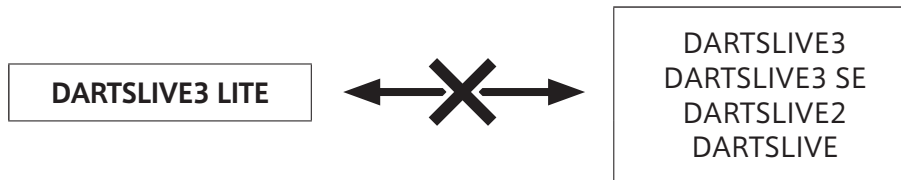

STEP 1

Connect "DARTSLIVE3 LITE" to the network and power it on.


STEP 2

It opens the initial setup screen. (4-3 Fig. 01)

Tap "Transfer registered machine data".

If the menu screen appears instead of initial setup screen, the network may be improperly connected.


See "6 Troubleshooting".

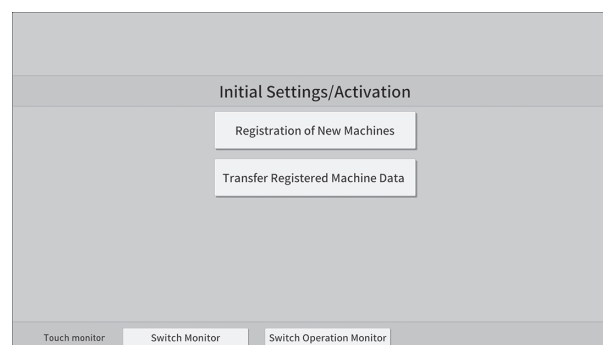

4 - 3 Fig. 01

STEP 3


Enter all of the following: "Registered Dealer ID", "Registered Dealer PASS (PIN)", "Original Machine ID", and "Registered Shop ID". Tap "All Entered".

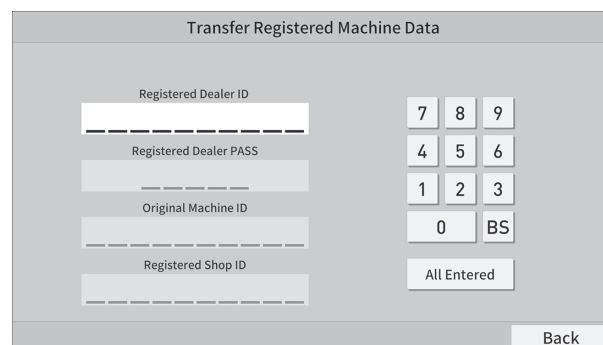

4 - 3 Fig. 02

STEP 4


The dealer name and shop name to register appear on the screen. Check the information to register. Tap "Yes" to complete the registration.

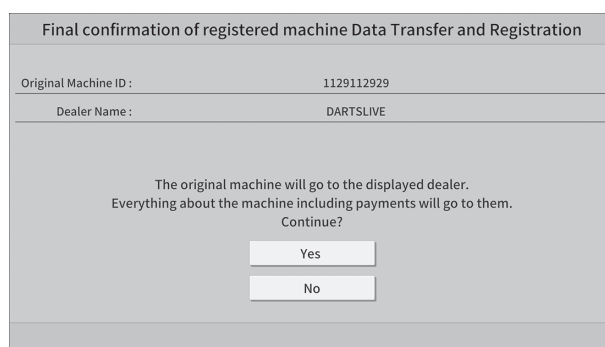

4 - 3 Fig. 03

STEP 5

Restart the machine.

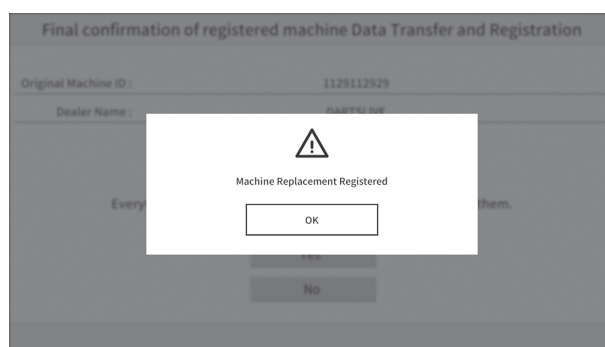

4 - 3 Fig. 04

< When Activation Screen Does Not Appear >

If the activation screen does not appear even though the machine has not been registered yet, the network may be connected incorrectly. If you turn on the power with the cable disconnected from the router, it starts in offline mode and you cannot perform activation registration. Contact DARTSLIVE Co., Ltd. for more detail.

< To Change the Registered Setting >

If there is a change in the information registered in the initial setup (registered dealer and registered store), change the setting with system maintenance menu. For more detail, see "5-6 Network Settings".

5 Maintenance Menu

WARNING

- Do not touch any part which are not instructed. Touching a part which is not instructed may cause electric shock or short circuit.
- Inspection inside the energized machine should be performed by Site Maintenance Personnel or technician. If you do not have the knowledge and skills, never perform the inspection. It may cause electric shock or short circuit.

IMPORTANT


- When a customer is playing on another dart machine connected to the network, you can still operate the maintenance menu with this dart machine.
- You can change setting for each machine, such as various game settings and Happy Hour Credit setting. Be careful when installing dart machines with different price settings in the same shop.
- Changes to the settings in the maintenance menu will take effect when you tap "End" after making the changes.
- The I/O board connected to "DARTSLIVE3 LITE" is the dedicated I/O board for "DARTSLIVE3 LITE".

Operations of the system maintenance menu include the operations inside the machine while power is on.


Pay more than enough caution as careless work may result in electric shock or short circuit.

Launching the Maintenance Menu


Stand at the front of the cabinet. Open the right side door and press "TEST" button.

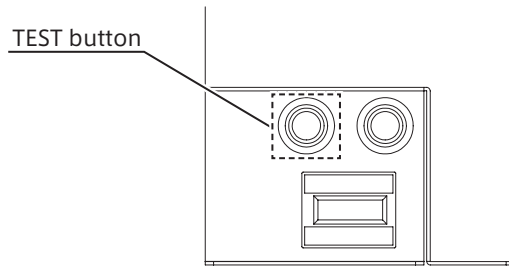

5 Fig. 01

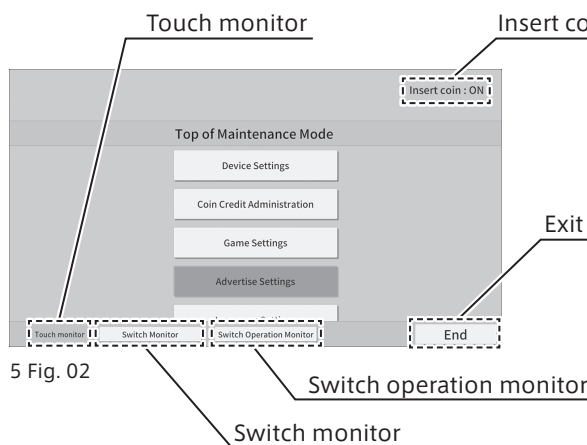

5 Fig. 02

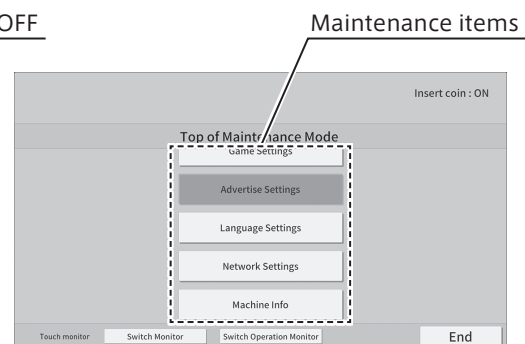

5 Fig. 03

Insert coin ON/OFF : It indicates that the Insert Coin Settings is ON.
It indicates that the Insert Coin Settings is OFF.
When the Free Play Settings is ON, "Free play" is displayed.
To change the insert coin settings, refer to "5-2 Coin Credit Administration".

Touch monitor : It indicates that the screen you are operating is the touch screen monitor.
If it is the upper monitor, change it with Switch monitor.

Switch Monitor : It swaps the content displayed on the upper monitor with the content displayed on the touch screen monitor.

Switch Operation Monitor : Tap this button to use the monitor you are touching as the main monitor.

Exit : Tap this button to reflect the changes and exit the maintenance mode.

Maintenance Items : You can adjust settings for various maintenance modes.


- Device settings - Refer to "5-1 Device Settings".
- Coin Credit Administration - Refer to "5-2 Coin Credit Administration".
- Game Settings - Refer to "5-3 Game Settings".
- Advertise Settings - Refer to "5-4 Advertise Settings".
- Language Settings - Refer to "5-5 Language Settings".
- Network Settings - Refer to "5-6 Network Settings".
- Machine info - Refer to "5-7 Machine Info".
- Housing Recording - Refer to "5-8 Housing Recording".

5 - 1 Device Settings

You can perform setting and adjustment on the devices.


- Monitor - Refer to "5-1-1 Monitor Settings".
- Camera - Refer to "5-1-2 Select Camera".
- Sensor - Refer to "5-1-3 Select Sensor".
- Target - Refer to "5-1-4 Target".
- Light - Refer to "5-1-5 Light".
- Sound - Refer to "5-1-6 Sound".

■ 5 - 1 - 1 Monitor Settings

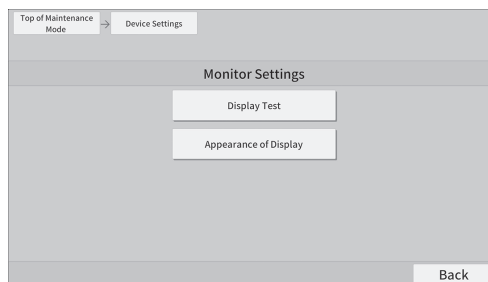


5 - 1 - 1 Fig. 01

Display Test : You can check the color adjustment of the upper monitor (5-1-1 Fig. 02) and the touch screen monitor (5-1-1 Fig. 03). The red, green, and blue colors are the darkest at the left end, and grow brighter in 31 levels as it moves to the right. The brightness of the monitor is normal when the white color bar is black at the left end and white at the right end.

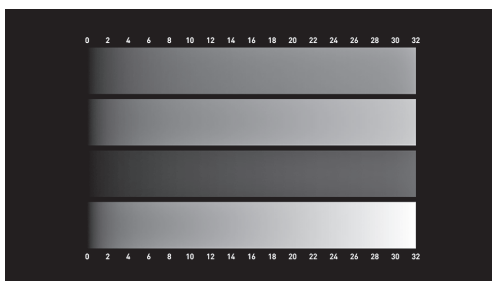


5 - 1 - 1 Fig. 02

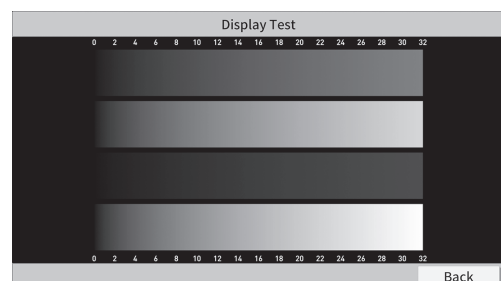


5 - 1 - 1 Fig. 03

Appearance of Display : You can check the size adjustment on the upper monitor (5-1-1 Fig. 04) and the touch screen monitor (5-1-1 Fig. 05).

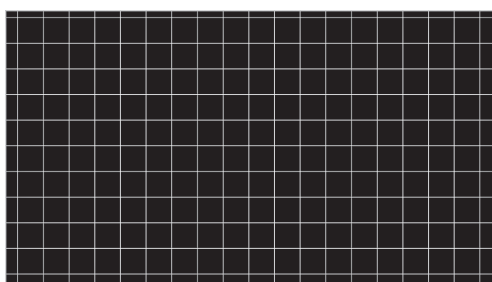


5 - 1 - 1 Fig. 04

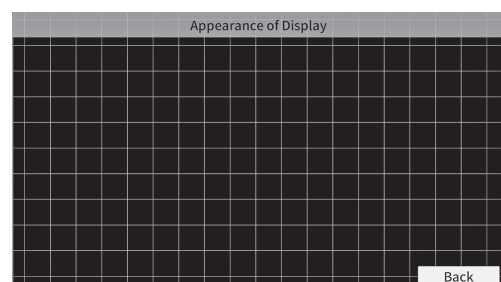


5 - 1 - 1 Fig. 05

■ 5 - 1 - 2 Select Camera

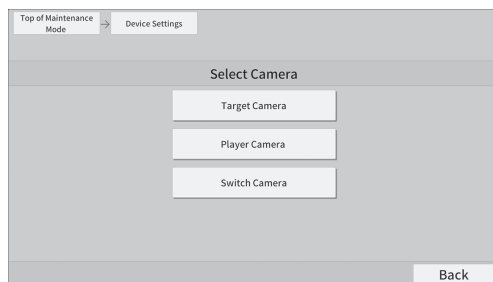


5 - 1 - 2 Fig. 01

Target Camera : You can check the display of the camera (5-1-2 Fig. 03) aimed at the target (the board) by performing a display test (5-1-2 Fig. 02).

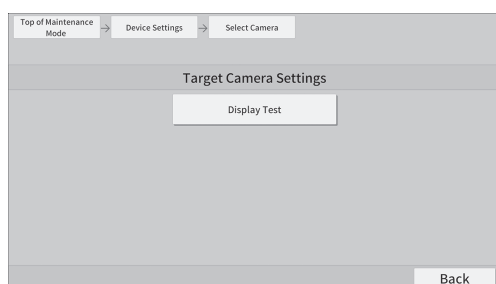


5 - 1 - 2 Fig. 02

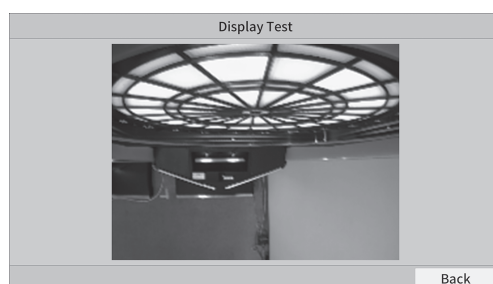


5 - 1 - 2 Fig. 03

Player Camera : You can check the display of the camera aimed at the player (5-1-2 Fig. 05) by performing a display test (5-1-2 Fig. 04).

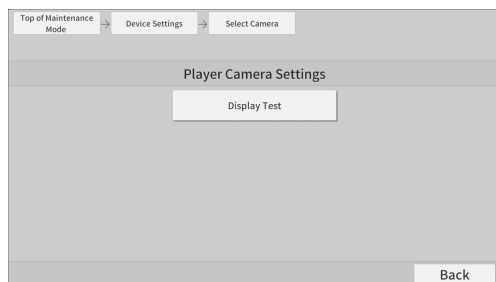


5 - 1 - 2 Fig. 04

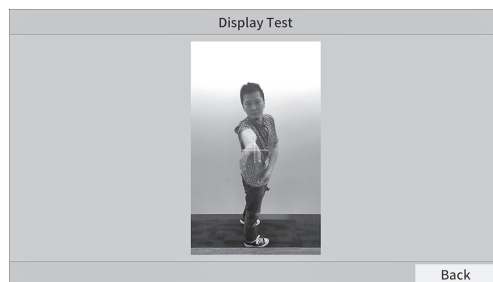

5 - 1 - 2 Fig. 05

Switch Camera : You can swap the target camera and player camera by tapping "Switch".

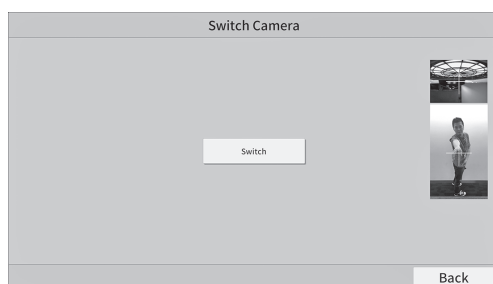


5 - 1 - 2 Fig. 06

■ 5 - 1 - 3 Select Sensor

You can make adjustment on the sensors.


- Target sensor - Refer to "5-1-3-1 Target Sensor".
- Impact sensor - Refer to "5-1-3-2 Impact Sensor".
- Card reader sensor - Refer to "5-1-3-3 Card Reader Sensor".

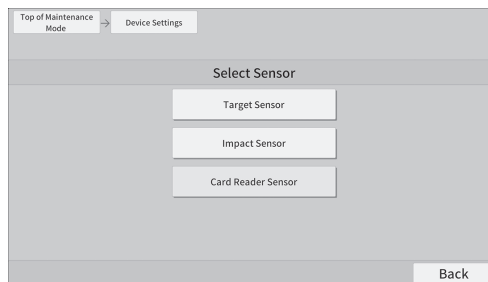

5 - 1 - 3 Fig. 01

5 - 1 - 3 - 1 Target Sensor


You can make adjustment on the sensor that detects where the dart hits on the target.

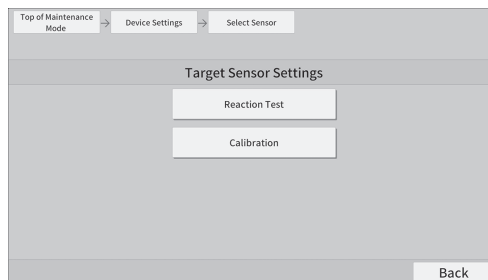

5 - 1 - 3 - 1 Fig. 01

Reaction Test : Perform reaction test on the target sensor.
Follow the instructions in order to perform the test.


Note : Start work with nothing stuck in the target.
Use a straight tip.
Be sure to check with one tip.
Do not touch the target during the check.
When the location you are checking turns yellow, remove the tip
and check the next location.

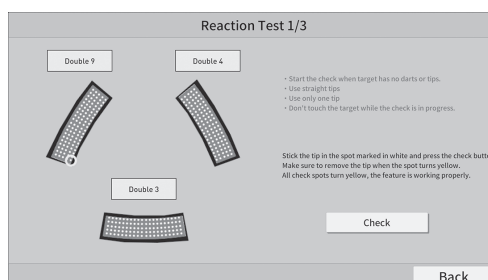

5 - 1 - 3 - 1 Fig. 02

Calibration : Make adjustments so that the target sensor properly sense the position where the dart hits on the target.
Follow the instructions in order to perform the test.

Note : Start work with nothing stuck in the target.
Use a straight tip.
Be sure to check with one tip.
Do not touch the target during the check.
When the location you are checking turns yellow,
remove the tip and check the next location.

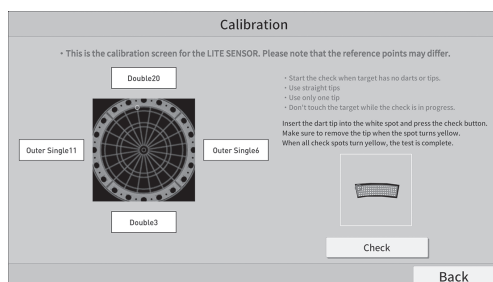


5 - 1 - 3 - 1 Fig. 03

5 - 1 - 3 - 2 Impact sensor

You can adjust the sensitivity of the impact sensor.
Impact sensors are used to make judgement of outboards during the game.


Sensitivity Adjustment : Moving the slide bar toward MIN makes the sensors respond to small impacts.
Conversely, moving it toward MAX makes the sensors less responsive even to large impacts.
You can Initialization the slide bar to the factory setting by tapping "Initialization".
When you apply impact to the target, it displays the gauge corresponding to the impact.
At this time, the number of the sensor that is responding also lights up.

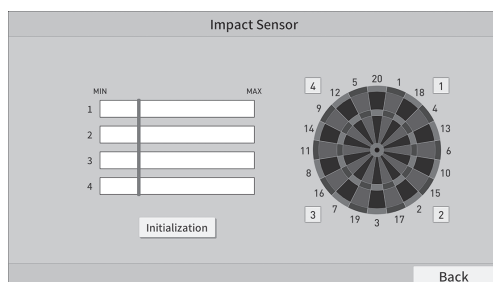

5 - 1 - 3 - 2 Fig. 01

5 - 1 - 3 - 3 Card Reader Sensor


You can check whether the card reader is working properly or not. When you insert the card into the card reader, the displayed word "NO CARD" changes to the number of the ID card. When you insert two cards, both "NO CARD" at two positions change.

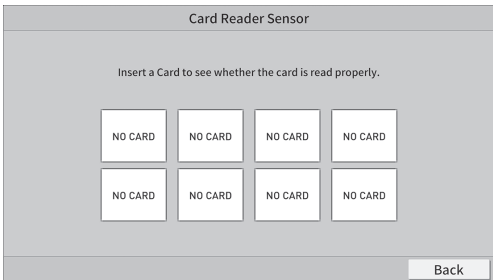

5 - 1 - 3 - 3 Fig. 01


■ 5 - 1 - 4 Target

You can perform target display test and membrane switch test.

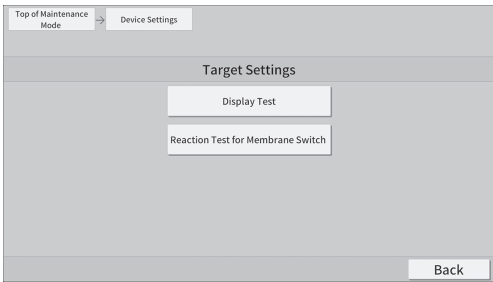

5 - 1 - 4 Fig. 01

Display Test : You can perform the display test of the target LED.
The target LEDs switch in order of red, green, blue, and white.
The display on the touch screen monitor changes accordingly.

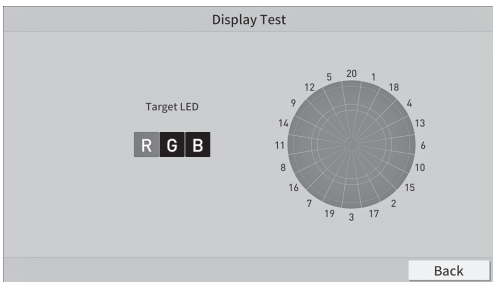


5 - 1 - 4 Fig. 02

Reaction Test for Membrane Switch : You can perform reaction test by pressing at each area on the target.

If the positions are displayed on the touch screen monitor when you press the target, the devices and wiring of the input system are normal.

Conduct this test periodically to check that the equipment is functioning properly.


The area from 1 to 20 on the target are divided into S (SINGLE-IN / SINGLE-OUT), D (DOUBLE), and T (TRIPLE).

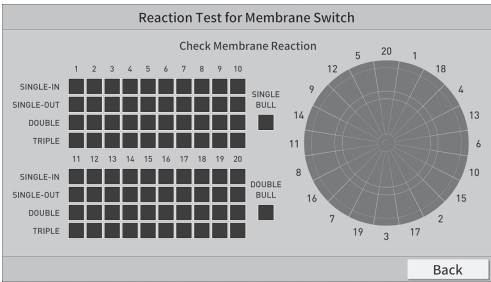

5 - 1 - 4 Fig. 03

■ 5 - 1 - 5 Light

- Number LED - Refer to "5-1-5-1 Number LED".

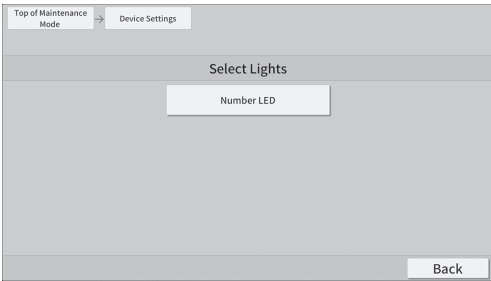


5 - 1 - 5 Fig. 01

5 - 1 - 5 - 1 Number LED

Brightness Adjustment : You can adjust the brightness of the Number LED on the target (the board).
You can adjust it in steps 0 to 3.
0 turns it OFF.
The smaller the number, the darker it gets; the larger the number, the brighter it gets.

Initialization : It restores the brightness to the factory setting.

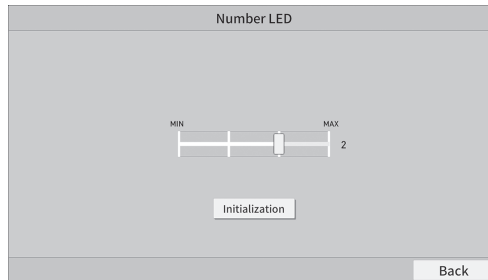


5 - 1 - 5 - 1 Fig. 01

■ 5 - 1 - 6 Sound

You can adjust the sound volume.
You can adjust it in steps 0 to 100.
0 turns it OFF.
The smaller the number, the smaller the sound gets; the larger the number, the larger it gets.

Initialization : It restores the sound volume to the factory setting.

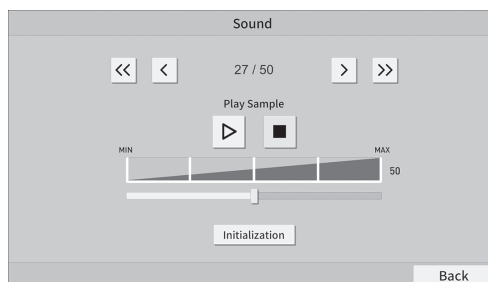


5 - 1 - 6 Fig. 01

5 - 2 Coin Credit Administration

You can check and configure various coin credit settings.

- Counter Management - Refer to "5-2-1 Counter Management".
- Insert Coin Settings - Refer to "5-2-2 Insert Coin Settings".
- Coin Chute Credit / Free Play Settings - Refer to "5-2-3 Coin Chute Credit / Free Play Settings".
- Settings for Regular Game Credit - Refer to "5-2-4 Settings for Regular Game Credit".
- Happy Hour Credit Settings / Setting Time - Refer to "5-2-5 Happy Hour Credit Settings / Setting Time".

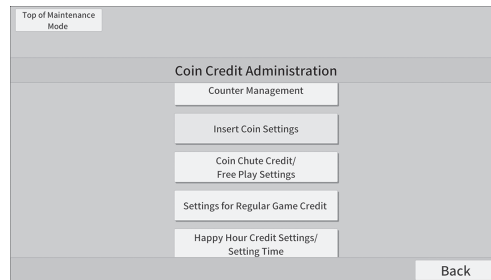


5 - 2 Fig. 01

■ 5 - 2 - 1 Counter Management

You can check the items required for counter management, and clear counter values.

- Counter by Credit - Refer to "5-2-1-1 Counter by Credit".
- Counter by Game - Refer to "5-2-1-2 Counter by Game".
- Reset All Counter Administration Data - Refer to "5-2-1-3 Reset All Counter Administration Data".

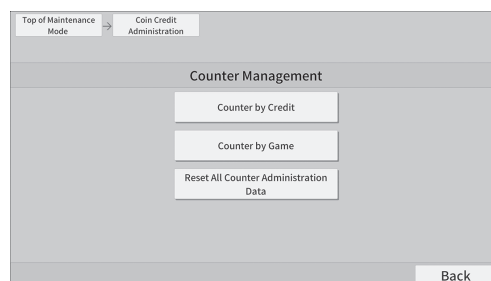

5 - 2 - 1 Fig. 01

5 - 2 - 1 - 1 Counter by Credit

You can check the Counter by Credit from the day the machine was started and the number of Counter by Credit from the date the counter was reset.

Reset : It resets the counter to zero that has been counted from the day it was last reset until today.

* You cannot reset the Counter by Credit that has been counted from the day the machine was started.

Counter from the day the machine was started

Counter from the date it was reset

5 - 2 - 1 Fig. 02

5 - 2 - 1 - 2 Counter by Game

It displays a list of Counter by Credit that were counted from the last day it was reset until today.

Play Ranking : It lists them in order of the Credit.

Those with the same Credit will be ranked in the same order.

Game : It lists the games linked to the Play Ranking.

Credit : It list the Credit put into the game.

Reset : It resets the Counter by Credit to zero that has been counted from the day it was last reset until today.


* You cannot reset the Counter by Credit that has been counted from the day the machine was started.

Play Ranking	Game	Credit
1	301	0
1	501	0
1	701	0
1	901	0
1	1101	0
1	1501	0
1	STANDARD CRICKET	0
1	HIDDEN CRICKET	0

5 - 2 - 1 - 2 Fig. 01

5 - 2 - 1 - 3 Reset All Counter Administration Data

You can reset all functions at once which can be reset in both Counter by Credit and Counter by Credit.

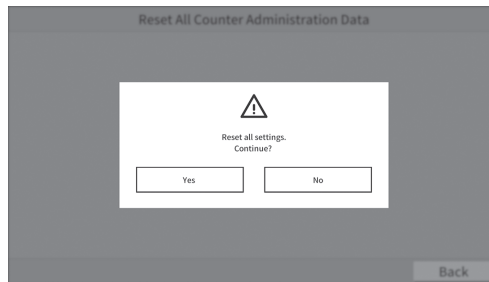

5 - 2 - 1 - 3 Fig. 01

■ 5 - 2 - 2 Insert Coin Settings

You can turn ON/OFF the Insert Coin Settings.

* You cannot configure Insert Coin when Free Play has been turned ON in "Coin Chute Credit / Free Play Settings".

ON : It enables the coin chute.


The Credit increases by putting coins into the coin chute.

* When the Credit is 999, it will automatically be turned OFF.


OFF : It disables the coin chute.

When you insert coins into the coin chute, they are ejected to the return slot.

* You cannot change the setting to ON while the Credit is 999 (5-2-2 Fig. 02).

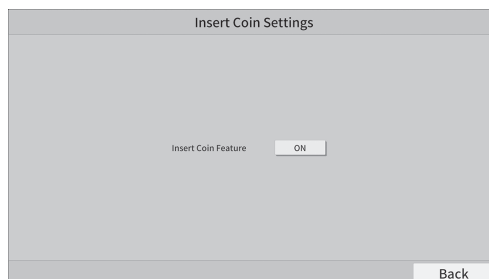

5 - 2 - 2 Fig. 01

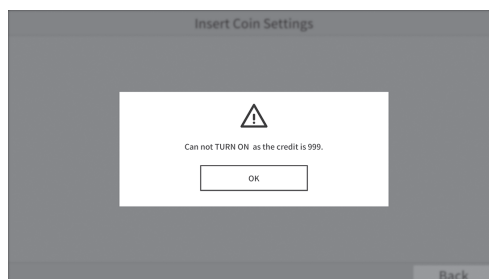

5 - 2 - 2 Fig. 02

■ 5 - 2 - 3 Coin Chute Credit / Free Play Settings

Coin Chute Credits : You can set the number of credit to increase for each coin inserted.

Free Play Settings : You can activate Free Play Settings by turning it ON.

* It automatically turns OFF Insert Coin Settings while Free Play Settings is enabled. In addition, you will not be able to change the Insert Coin Settings.

* In some cases you cannot activate Free Play Settings.

Initialization : It restores the Coin Chute Credits / Free Play Settings to the factory setting.

Coin Chute Credit/Free Play Settings

Coin Chute Credits 1

Free Play Settings OFF

Initialization

Back

5 - 2 - 3 Fig. 01

■ 5 - 2 - 4 Settings for Regular Game Credit

Credit : You can change the number of credit for each game between 1 to 5.

Initialization : It restores the number of credit to the factory setting.

Settings for Regular Game Credit

Category	Game	Credit
01	301	1
	501	1
	701	2
	901	2
	1101	2
	1501	2
CRICKET	STANDARD CRICKET	2
	HIDDEN CRICKET	2
	TEAM CRICKET	2

Initialization

Back

5 - 2 - 4 Fig. 01

■ 5 - 2 - 5 Happy Hour Credit / Time Setting

You can configure the credit setting applied while in Happy Hour and the time for Happy Hour.

- Game Credit Settings - Refer to "5-2-5-1 Game Credit Settings".
- Time Settings - Refer to "5-2-5-2 Time Settings".

Top of Maintenance Mode → Coin Credit Administration

Happy Hour Credit Settings/Setting Time

Game Credit Settings

Time Settings

Back

5 - 2 - 5 Fig. 01

5 - 2 - 5 - 1 Game Credit Settings

Settings for Happy Hour Free Play : You can enable Free Play during Happy Hour by turning this ON.

Credit Settings for all : By turning this ON, it will reflect the Credit Settings for all during Happy Hour.

You can change it between 1 to 5 credits.

* When Credit Settings for all is ON, you cannot configure the number of credit for individual games.

Number of Credit : You can change the number of credit for each game between 1 to 5.

* You cannot change it when Credit Settings for all is ON.

Initialization : It restores the number of credit to the factory setting.

Category	Game	Credit
01	301	1
	501	1
	701	2
	901	2
	1101	2
	1501	2
	STANDARD CRICKET	2

5 - 2 - 5 - 1 Fig. 01

5 - 2 - 5 - 2 Time Settings

You can set the day and time of Happy Hour.

When you touch and swipe the time you want to set, it will color the time zone of the set day of the week.

You can cancel it by touching the colored section again.

Initialization : By tapping this, you can Initialization the day and time for Happy Hour to the factory setting.


	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	1	2	3	4	5	6	7	8
Mon																								
Tue																								
Wed																								
Thu																								
Fri																								
Sat																								
Sun																								

5 - 2 - 5 - 2 Fig. 01

5 - 3 Game Settings

You can configure if to display specific games, change the number of rounds and the number of Back to the Prev Player/ Darts Position Correction.

- Settings by Category / by Game - Refer to "5-3-1 Settings by Category / by Game".
- Basic Settings - Refer to "5-3-2 Basic Settings".

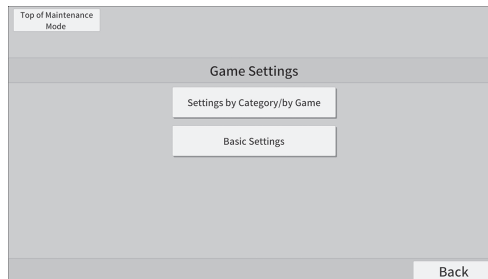

5 - 3 Fig. 01

■ 5 - 3 - 1 Settings by Category / by Game


Show / Hide by Category : Categories and games that are set to ON appear in the menu.

Categories and games that are set to OFF will not be displayed in the menu.

Show / Hide by Game : Games that are set to ON appear in the menu.
Games that are set to OFF will not be displayed in the menu.

Number of Round Setting by Game : Games proceed with the set number of rounds.

Initialization : It restores the display setting and number of rounds to the factory setting.

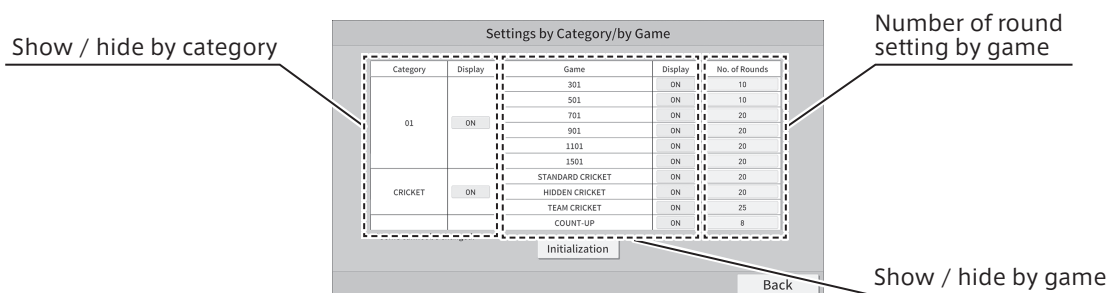

5 - 3 - 1 Fig. 01

■ 5 - 3 - 2 Basic Settings


You can change the setting that is common in the games.

Limit on Back to the Prev Player / Darts Position Correction :

You can limit the number of times to make correction when there is a mistake in dart position.

You can change the setting between 0 to 9 times.

Initialization : It restores the limit on number of corrections to the factory setting.

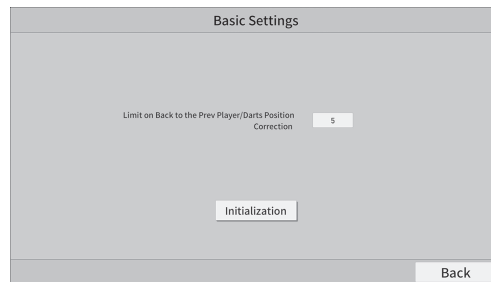

5 - 3 - 2 Fig. 01

5 - 4 Advertise Settings

Advertise Sound Setting : You can turn ON/OFF the sound of advertise.

* Some advertise have no sound from the beginning.

* In some cases, Advertise Sound Setting is not available.

5 - 5 Language Settings


You can change the language to use.

* In some cases, Language Settings is not available.

5 - 6 Network Settings

In Network Test on DARTSLIVE3 LITE, you can test the status of network operation. In Online Settings, you can change registered shops and cancel the network services.

- Network Test - Refer to "5-6-1 Network Test".
- Online Settings - Refer to "5-6-2 Online Settings".

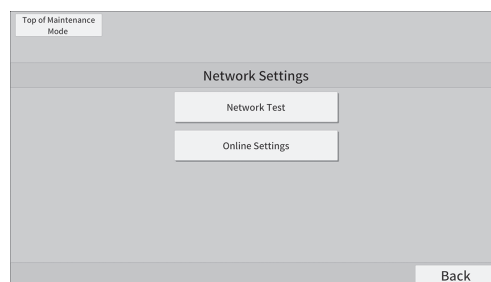

5 - 6 Fig. 01

■ 5 - 6 - 1 Network Test

When it is operating normally, it displays "OK" on the item.

When it is having an error, it displays "ERROR" on the item having the error.

The screenshot shows a 'Network Test' screen with a table of test results. The table has three columns: the test item, the status, and the value. The tests performed are IP ADDRESS, Ping to Router, Server1, Server2, and Download Speed. All status values are 'OK'. The IP ADDRESS is 157.100.106.224, Ping to Router is 157.100.106.254, and Download Speed is 533 KB/s. A 'Back' button is at the bottom right.

Item	Status	Value
IP ADDRESS	OK	157.100.106.224
Ping to Router	OK	157.100.106.254
Server1	OK	
Server2	OK	
Download Speed		533 KB/s

5 - 6 - 1 Fig. 01

■ 5 - 6 - 2 Online Settings

- Change Registered Shops - Refer to "5-6-2-1 Change Registered Shops".
- Cancel Network Service - Refer to "5-6-2-2 Cancel Network Service".

The screenshot shows the 'Online Settings' screen. At the top, there are two tabs: 'Top of Maintenance Mode' and 'Network Settings'. Below the tabs, there are two buttons: 'Change Registered Shops' and 'Cancel Network Service'. A 'Back' button is at the bottom right.

5 - 6 - 2 Fig. 01

5 - 6 - 2 - 1 Change Registered Shops

Enter all of the following: "Registered Dealer ID", "Registered Dealer PASS (PIN)", and "Target Shop ID". Tap "All Entered".


The screenshot shows the 'Change Registered Shops' screen. It has three input fields: 'Registered Dealer ID', 'Registered Dealer PASS', and 'Target Shop ID'. To the right of these fields is a numeric keypad with digits 7, 8, 9, 4, 5, 6, 1, 2, 3, 0, and a 'BS' (Backspace) button. Below the keypad is an 'All Entered' button. A 'Back' button is at the bottom right.

5 - 6 - 2 - 1 Fig. 01

1 It displays names of the dealer, the old shop, and the new shop. Verify the changes. Tapping "Yes" will complete the change of registered shop. (5-6-2-1 Fig. 02)
2 After changing the registered shop, DARTSLIVE3 LITE needs to be restarted. Please restart DARTSLIVE3 LITE. (5-6-2-2 Fig. 03)




5 - 6 - 2 - 1 Fig. 02

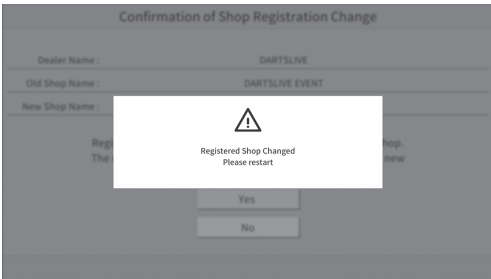

5 - 6 - 2 - 1 Fig. 03


5 - 6 - 2 - 2 Cancel Network Service

Enter "Registered Dealer ID" and "Registered Dealer PASS (PIN)". Tap "All Entered".

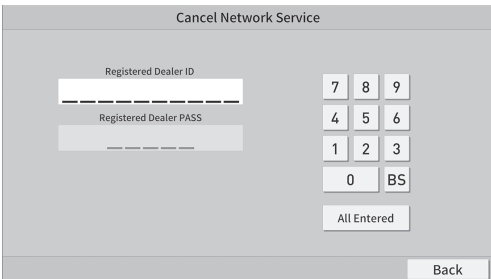

5 - 6 - 2 - 2 Fig. 01

When the final confirmation screen appear, you can cancel the network service by tapping "Yes".

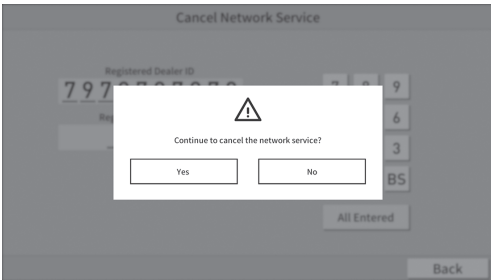

5 - 6 - 2 - 2 Fig. 02

5 - 7 Machine Info

It displays information about current settings for network services on the machine.

Machine ID : Identification unique to the machine.

Sub Machine ID : Sub-identification unique to the machine.

Shop Name : Name of the shop where DARTSLIVE3 LITE is installed.

Date and time : Current date and time.

* The time is automatically adjusted when online.


The screenshot shows a 'Machine Info' screen with the following fields and values:

Machine Info		
Machine ID : 2660207070/4c7f366b3ca84605e2a9399284605e2a93cfd8		
Sub Machine ID : 2660207070		
Shop Name : DARTSLIVE Co.,Ltd		
Date and Time : 3/05/2020 12:00:28 PM		
FW Version		
Main I/O Board : 1.0.2.0		
Membrane I/O Board : 1.0.1.1		
Target Sensor Master : Sub001		
Target Sensor Slave : Sub001		
Speed Sensor : Version-02V-001, All Aug 19 2016		
Assembly Version		Launcher : 1.0.3.0
		Software Updater : 20200210110000
		Back

5 - 7 Fig. 01

5 - 8 Housing Recording

You can configure the housing recording settings.

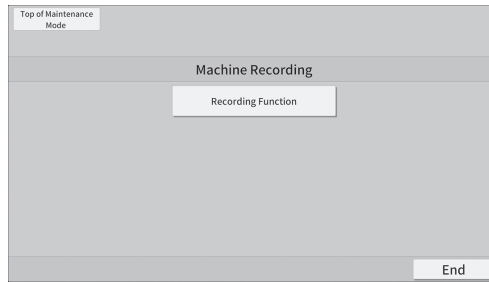


5 - 8 Fig. 01

■ 5 - 8 - 1 Recording function

You can configure the recording function settings.

ON : Enable the recording function of the machine.


OFF : Disable the recording function of the machine.

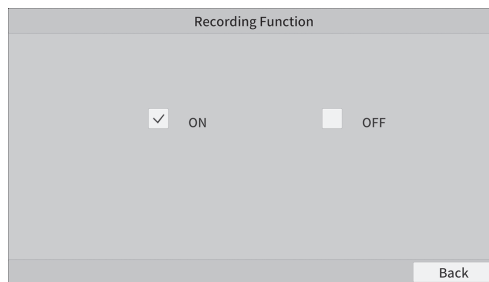

5 - 8 - 1 Fig. 01

The ON or OFF setting of the recording function can be found in INFORMATION in the TOP menu.

- Recording function ON: The icon appears.

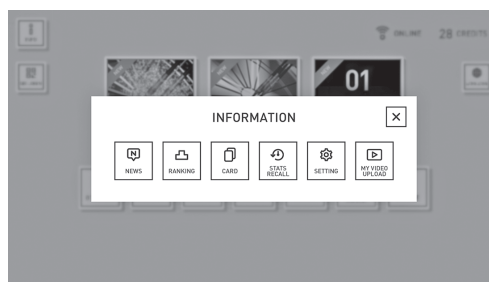

5 - 8 - 1 Fig. 02

- Recording function OFF: The icon is grayed out.




5 - 8 - 1 Fig. 03

6 Troubleshooting

If the network does not operate normally, take the following steps first.

- * Before turning off the power of "DARTSLIVE3 LITE", be sure to restart the modem and router. Not doing so may clear the stored data.
- * If the network is operating normally, online symbol appears at the network operation status.

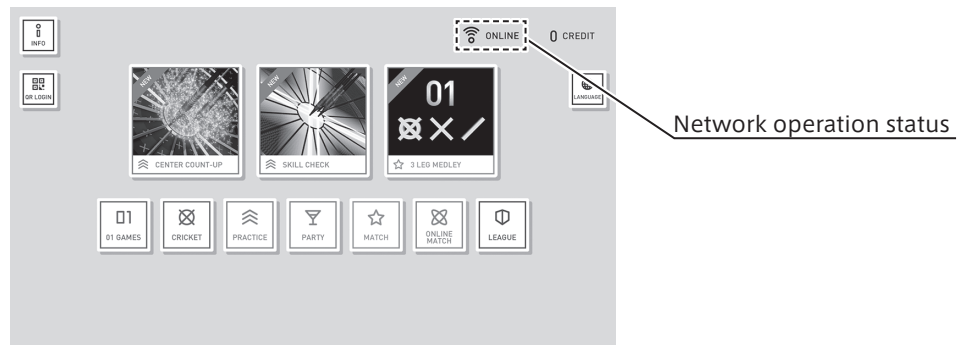

6 Fig. 01

Check if there is no error displayed at the online symbol in the upper right of the lower screen.

It displays OFFLINE.

Restart the router.

* The router will start up in about 30 seconds. Wait for it to restart, and turn on the power of "DARTSLIVE3 LITE".

Check the wiring first for disconnected connectors.

* Check all sockets.

Restart "DARTSLIVE3 LITE".

It displays NETWORK ERROR.

Restart the modem.

Check the wiring again for disconnected connectors.

Restart the router.

* Do not turn off the power of "DARTSLIVE3 LITE". It may clear the stored data.

* The line may be under construction. Contact your ISP.

It displays ROUTER ERROR.

Check the wiring for disconnected connectors.

Restart the router.

* Do not turn off the power of "DARTSLIVE3 LITE". It may clear the stored data.

It displays SERVER ERROR.

There is a problem with the server at DARTSLIVE Co., Ltd. This is not an error with "DARTSLIVE3 LITE". Please wait for a while.

It displays MAINTENANCE.

The server is under maintenance at DARTSLIVE Co., Ltd. This is not an error with "DARTSLIVE3 LITE". Please wait for a while.

For inquiries regarding networks other than the above, contact your dealer.

6 - 1 Overview of Network

■ 6 - 1 - 1 Network Structure

The network connection for "DARTSLIVE3 LITE" is structured as the following.



6 - 1 - 1 Fig. 01

■ 6 - 1 - 2 Supplemental Terminology

Router : A device to connect multiple LANs. Installed at a junction connecting multiple LANs, it relays data flowing on the network to other networks.


LAN : A computer network connecting multiple computers in the same building.

HUB : LAN cable concentrator.

■ 6 - 1 - 3 Network Operation Status

At the top right corner on the screen of the "DARTSLIVE3 LITE", you can check the status of the network.

Operation status are classified into the following six types.

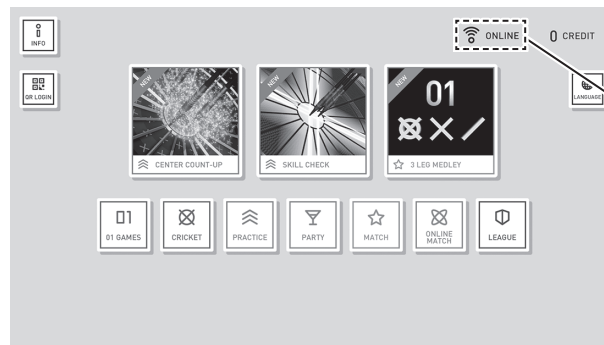

6 - 1 - 3 Fig. 01

Online :

It is connected to the network and operating normally.

You can see the line speed with the icon.



6 - 1 - 3 Fig. 02

Offline :

It is not connected to the network.



6 - 1 - 3 Fig. 03

Network Error :

Network is disconnected.



6 - 1 - 3 Fig. 04

Router Error :

It is not connected to the network because of the router.



6 - 1 - 3 Fig. 05

Server Error :

The server at DARTSLIVE Co., Ltd. is having an error.

Data is not recorded on the server.



6 - 1 - 3 Fig. 06

Server Maintenance :

The server is under maintenance at DARTSLIVE Co., Ltd.

Data is not recorded on the server.



6 - 1 - 3 Fig. 07

■ 6 - 2 - 1 When it Says OFFLINE

Cause : Contact failure or disconnection of power supply or LAN.

The following causes can be considered:

- Cable is disconnected.
- Router is not turned on.
- Router has an error.
- Error around HUB.
- Failure of network cable.
- It is operating without activation. (exceptional case)

Actions to Take : Check the following items:

< Check Cable and Hub >

→ Check the sockets of the connected devices for disconnected or loose cable.

< Check Router >

■ Is the LED indicator on the router lit on?

→ If it is not lit, the router is not powered on. Check the AC adapter.

■ Is the WAN indicator on the router lit on?

→ If it is not lit, the cable between the modem and the router is not connected properly.

Are the cables from the modem and other devices connected to the router's socket for WAN? Are they firmly connected?

Are the cables from the router connected to the modem or other devices? Are they firmly connected?

■ Is the LAN indicator on the router lit on?

→ If it is not lit, the cable between the router and "DARTSLIVE3 LITE" is not connected properly.

Is the cable from the router connected to the "DARTSLIVE3 LITE"? Is it firmly connected?

Is the cable from the "DARTSLIVE3 LITE" connected to the router? Is it firmly connected?

■ Is the DIAG indicator lit on?

→ If it is lit, something is wrong with the router. Restart the router.

■ If none of the above apply

→ Turn off the power and start it up again.

If it still does not operate online, contact your dealer.

■ 6 - 2 - 2 When it Says ERROR

It displays error when it is turned on.
Or, it displayed an error while it was running online.

Cause : It is either contact failure of LAN, Internet connection failure, or access restriction.

Actions to Take : Type of error is displayed on the left side of the error display. Take actions according to each type.

< ROUTER ERROR >

You have an error in network line. You need to take the same action as when it is offline.

■ Is the LED indicator on the router lit on?

→ If it is not lit, the router is not powered on. Check the AC adapter.

■ Is the WAN indicator on the router lit on?

→ If it is not lit, the cable between the modem and the router is not connected properly.

Are the cables from the modem and other devices connected to the router's socket for WAN? Are they firmly connected?

Are the cables from the router connected to a modem or other devices? Are they firmly connected?

Are the power of the modem and other devices connected?

■ Is the LAN indicator on the router lit on?

→ If it is not lit, the cable between the router and "DARTSLIVE3 LITE" is not connected properly.

Is the cable from the router connected to the "DARTSLIVE3 LITE"? Is it firmly connected?

Is the cable from the "DARTSLIVE3 LITE" connected to the router? Is it firmly connected?

■ Is the DIAG indicator lit on?

→ If it is lit, something is wrong with the router. Restart the router.

< NETWORK ERROR >

You have an Internet connection failure due to ISP (Internet service provider) or telephone line.

Check the line first. (This can be due to construction or maintenance on the line.)

After a certain period of time, it automatically shifts to online mode when the line is restored.

< SERVER ERROR >

Cause : There is a problem with the server at DARTSLIVE Co., Ltd. This is not an error with "DARTSLIVE3 LITE".

Actions to Take : Keep it operating offline. It will automatically switch to online operation when the actions on the server is completed.

< When it says MAINTENANCE >

Cause : The server is under maintenance at DARTSLIVE Co., Ltd.

Actions to Take : Server maintenance is not an error. "DARTSLIVE3 LITE" usually shuts down the network for about one hour from 6:30 a.m. (Japan Standard Time) on the first day every month due to server maintenance.

You cannot execute any procedure or use service using the network, such as online operation and activation operations. At such times, leave it operating offline. It automatically switches to online operation after the maintenance is completed.

6 - 3 Updating firmware

■ 6 - 3 - 1 If the message "I/O BD Firmware upgraded. Please reboot the machine." appears at startup

If there is a firmware update when the "DARTSLIVE3 LITE" is turned on, the message "Updating I/O BD Firmware" will appear, and then the message will switch to "I/O BD Firmware upgraded. Please reboot the machine." Please turn the power back on, as a reboot is required to complete the update.



6 - 3 - 1 Fig. 01



6 - 3 - 1 Fig. 02

For general inquiries:

DARTSLIVE Support Desk

<https://www.dartslive.com>

* Please note that this support desk is not accepting inquiries regarding the machine and the parts.

Please contact the retailer for such inquiries.

DARTSLIVE Co.,Ltd.

Sumitomo Fudosan Osaki Garden Tower, 1-1-1 Nishi-Shinagawa, Shinagawa-ku,
Tokyo 141-0033, Japan

<http://www.dartslive.com/corp/jp/contact/>

For basic troubleshooting, go to the following "Product Support Page".



<http://www.dartslive.jp/info/support/eng/index.html>

The information herein contained are as of November 2024.

1st edition

November 2024